

## Operating / Mounting instructions



# ETH Electro Cylinder with ATEX Parker High Force Electro Thrust Cylinder



D O C - 0 0 0 8 - 0 1

192-550003N10 ETH  
ATEX  
December 2019

## Production site:

Parker Hannifin Manufacturing Germany GmbH & Co. KG  
Electromechanical & Drives Division Europe [EMDE]  
Robert-Bosch-Strasse 22  
77656 Offenburg, Deutschland)  
Tel.: + 49 (0781) 509-0  
fax + 49 (0781) 509-98176  
Internet: [www.parker.com/eme](http://www.parker.com/eme) <http://www.parker.com/eme>  
Email address: [sales.automation@parker.com](mailto:sales.automation@parker.com) <mailto:EM-Motion@parker.com>

Parker Hannifin GmbH - registered office: Bielefeld HRB 35489  
Management Board: Ellen Raahede Secher, Dr.-Ing. Hans-Jürgen Haas, Kees Veraart - Chairman of the board: Hansgeorg Greuner

### Italy:

Parker Hannifin Manufacturing Srl  
Electromechanical & Drives Division [EME]  
Via C. Gounod, 1  
20092 Cinisello Balsamo (Milano), Italy  
Phone: + 39 (0)2 361081  
Fax: + 39 (0)2 36108400  
Internet: [www.parker.com/eme](http://www.parker.com/eme) <http://www.parker.com/eme>  
E-mail: [parker.italy@parker.com](mailto:parker.italy@parker.com) <mailto:parker.italy@parker.com>

## Non-warranty clause

We checked the contents of this publication for compliance with the associated hardware and software. We can, however, not exclude discrepancies and do therefore not accept any liability for the exact compliance. The information in this publication is regularly checked, necessary corrections will be part of the subsequent publications.  
German Master created.

## Additional/ current information:

Our product on the internet: [http://solutions.parker.com/eth\\_support](http://solutions.parker.com/eth_support)

## About this manual

This manual contains notes and safety instructions, information about commissioning, service and maintenance.  
For information on project development (technical data, dimensions, accessories, options, dimensioning aids and order code) please refer to ETH catalogue.

# Inhalt

<b>1. Introduction .....</b>	<b>5</b>
1.1 Device assignment .....	5
1.2 Type identification plate .....	5
1.3 Mounting explanation .....	6
1.4 ATEX declaration of conformity .....	7
1.5 Introduction to ATEX .....	8
1.5.1 Explosive atmospheres .....	8
1.5.2 Harmonized European ATEX Standard .....	8
1.5.3 Zone classification / device categories .....	9
1.5.4 Type of explosion protection .....	9
1.5.5 Explosion subgroup .....	10
1.5.6 Temperature classes .....	10
1.5.7 ATEX and machinery directive .....	10
1.6 ETH ATEX marking .....	11
1.7 Applications in accordance with the Regulations .....	12
1.7.1 Applications not in accordance with the intended use .....	13
1.8 Operator's obligations .....	13
1.9 For Safety Use .....	14
1.9.1 General hazards .....	14
1.9.2 Identifying Residual Dangers and Hazardous Areas .....	14
1.9.3 Working safely .....	14
1.9.4 Safety Instructions for the Company Using the System .....	15
1.9.5 Safety Instructions for Operating Personnel .....	15
1.9.6 ATEX specific safety instructions .....	16
1.9.6.1 ATEX specific safety instructions .....	16
1.9.6.2 General safety instructions - ATEX .....	16
1.9.6.3 Product specific safety instructions .....	16
1.10 Packaging, storage, transport .....	17
1.10.1 Special notes on transport .....	18
1.11 Terms of guarantee / warranty .....	21
1.12 Conditions of utilization .....	22
1.13 Planning of the ETH Electro Cylinder for EX-Environment .....	23
<b>2. Commissioning .....</b>	<b>24</b>
2.1 Mounting .....	24
2.1.1 Mounting with mounting threads on the cylinder .....	25
2.1.2 Mounting with mounting accessories .....	25
2.1.2.1 Cylinder mounting with mounting plates or foot mounting brackets .....	25
2.1.2.2 Screw tightening torques for the mounting of the customer's ETH cylinder .....	25
2.1.2.3 Accessory mounting - bearing block .....	27
2.1.2.4 Mounting the rod guide (option R) .....	27
2.1.3 Mounting of the payload .....	28
2.1.3.1 Side Load .....	28
2.1.3.2 Mounting of the payload .....	28
2.1.3.3 Mounting of force sensors .....	29
2.2 Electrical installation .....	30
2.2.1 Direction of the motor during extension of the cylinder .....	30

2.2.2.	<b>Sensors</b> .....	<b>30</b>
2.2.2.1	Mounting of proximity switches.....	30
2.2.3.	<b>Setting the end limits</b> .....	<b>31</b>
<b>2.3</b>	<b>Motor/ gear assembly</b> .....	<b>32</b>
2.3.1.	<b>Motor / gear assembly with inline motor configuration</b> .....	<b>33</b>
2.3.2.	<b>Motor / gearbox mounting with parallel motor configuration</b> .....	<b>35</b>
2.3.2.1	Parallel mounting ETH032 ... ETH080 standard .....	35
2.3.2.2	Parallel mounting ETH032 ... ETH080 with Ex - Motor .....	37
2.3.2.3	Parallel mount ETH100:.....	39
2.3.2.4	Re-apply toothed belt pre-tension .....	41
2.3.2.5	Resetting the toothed belt pre-tension.....	41
2.3.3.	<b>IP65 motor mount</b> .....	<b>42</b>
2.3.3.1	Motor mounting for IP65 inline.....	42
2.3.3.2	IP65 motor mount parallel.....	43
<b>3.</b>	<b>Maintenance and service</b> .....	<b>44</b>
3.1	<b>Maintenance schedule</b> .....	<b>44</b>
3.2	<b>Lubricating intervals and amount of lubricant for ATEX ETH- Electro Cylinder</b> .....	<b>45</b>
3.2.1.	Relubrication via central lubrication port (standard).....	45
3.2.2.	Relubrication via central lubrication port (option).....	46
3.3	<b>Toothed belt</b> .....	<b>47</b>
3.3.1.	Checking the toothed belt .....	47
3.3.2.	Toothed belt exchange .....	47
3.3.3.	Exchanging the toothed belt (ETH032 ... 080).....	48
3.3.4.	Exchanging the toothed belt (ETH100&125).....	49
3.4	<b>Belt / belt tensions</b> .....	<b>50</b>
<b>4.</b>	<b>Supply repair</b> .....	<b>50</b>
<b>5.</b>	<b>Index</b> .....	<b>51</b>

# 1. Introduction

## In this chapter you can read about:

Device assignment .....	5
Type identification plate .....	5
Mounting explanation .....	6
ATEX declaration of conformity .....	7
Introduction to ATEX .....	8
ETH ATEX marking .....	11
Applications in accordance with the Regulations .....	12
Operator's obligations .....	13
For Safety Use .....	14
Packaging, storage, transport .....	17
Terms of guarantee / warranty .....	21
Conditions of utilization .....	22
Planning of the ETH Electro Cylinder for EX-Environment .....	23

## 1.1 Device assignment


**This manual applies for the following devices:**

Electro cylinder for motors and gearboxes:

- ◆ ETH032 Atex marked
- ◆ ETH050 Atex marked
- ◆ ETH080 Atex marked
- ◆ ETH100 Atex marked
- ◆ ETH125 Atex marked.

## 1.2 Type identification plate

**Type specification plate (example)**

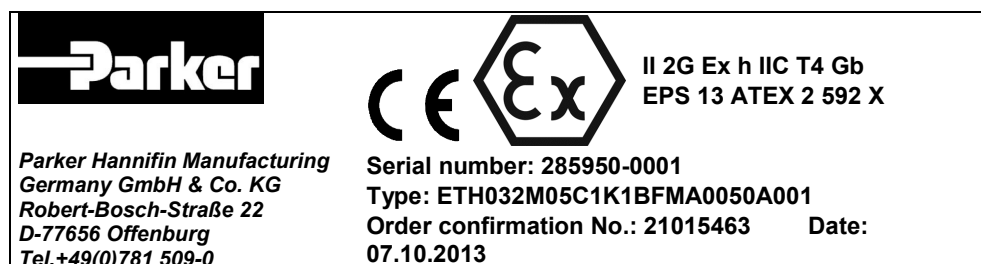

### Type specification plate explanation

**Left:** Manufacturer address

**Right:** CE, Ex, ... ATEX marked  
Serial no Unambiguous identification number

Type: Order Code:  
ETH032M05C1K1BFMA<sup>①</sup>0050A<sup>②</sup>001

① "A" = ATEX cylinder

② "000" Standard ATEX Cylinder, tested with the force- velocity diagrams

"001" ATEX application identification number 1, ...  
= (A-No. with unambiguous allocation to ATEX application data)

Order No.: Customer Order confirmation Number

Date: Delivery date

## 1.3 Mounting explanation



**Parker Hannifin Manufacturing Germany GmbH & Co KG**

Robert-Bosch-Straße 22  
D-77656 Offenburg

Tel.: +49 (0) 781-509-0  
Fax.: +49 (0) 781-509-98176

www.parker.com/eme

### EINBAUERKLÄRUNG

### DECLARATION OF INCORPORATION

ACCORDING TO EC DIRECTIVE 2006/42/EC (ANNEX II, PART 1, SECTION B) FOR PARTLY COMPLETED MACHINERIES

Dokumenten Nr. <i>Declaration No.:</i>	<b>DoI001-R 3.0</b>
Firma / <i>Manufacturer:</i> Bevollmächtigter / <i>Authorized person:</i>	<b>Parker Hannifin GmbH &amp; Co KG Jürgen Killius</b>
Anschrift <i>Address:</i>	<b>Robert-Bosch-Straße 22 77656 Offenburg Deutschland</b>
Produkt <i>Product:</i>	<b>ETH: Parker High Force Electro Thrust Cylinder</b>
Serien- / Typenbezeichnung <i>Model / Type:</i>	<b>ETH032; ETH050; ETH080; ETH100; ETH125</b>
Seriennummer <i>Serial No.:</i>	ETH032 bis -125: <b>Ab 35410387-0001</b> ETH032 till -125: <b>As of 35410387-0001</b>
Baujahr <i>Year of manufacture:</i>	ETH032 bis -125: <b>Ab Juli 2014</b> ETH032 till -125: <b>As of July 2014</b>

Der oben genannte Hersteller / Bevollmächtigte erklärt, dass das Produkt den folgenden grundlegenden Anforderungen der Richtlinie Maschinen (2006/42/EG) entspricht:

*The above mentioned Manufacturer / authorized person declare that the product is complying with the following essential requirements of the machinery directive 2006/42/EC:*

Anhang I, Artikel / *Annex I, Article:* 1.1.1, 1.1.2, 1.1.3, 1.1.5, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.7, 1.4.1, 1.5.4, 1.5.8 & 1.6.1.

Norm / <i>Standard</i>	Titel / <i>Title</i>	Ausgabe / <i>Edition</i>
DIN EN ISO 12100:2011	Sicherheit von Maschinen – Allgemeine Gestaltungsgrundsätze, Risikobeurteilung und Risikominimierung <i>Safety of Machinery – General principles for design, risk assessment and risk reduction</i>	2011-03

Den im Produkthandbuch beschriebenen Sicherheits-, Installations- und Bedienungshinweisen muss Folge geleistet werden.  
*These products must be installed and operated with reference to the instructions in the Product Manual.*  
*All instructions, warnings and safety information of the Product Manual must be adhered to.*

Die unvollständige Maschine darf erst dann in Betrieb genommen werden, wenn festgestellt wurde, dass die Maschine, in die die unvollständige Maschine eingebaut werden soll, den Bestimmungen der Richtlinie Maschine 2006/42/EG entspricht.  
*The partly completed machinery must not be put into service until the final machinery, into which it is to be incorporated, has been declared in conformity with the provisions of directive 2006/42/EC on machinery.*

Die zur Maschine gehörenden speziellen technischen Unterlagen nach Anhang VII Teil B wurden erstellt.  
*The machinery related special technical documentation according annex VII B has been created.*

Der Hersteller verpflichtet sich, die speziellen Unterlagen zur unvollständigen Maschine einzelstaatlichen Stellen auf Verlangen elektronisch zu übermitteln. Die gewerblichen Schutzrechte des Herstellers der unvollständigen Maschine bleiben hiervon unberührt.  
*The manufacturer commits to transmit, in response to a reasoned request by the market surveillance authorities, relevant documents on the partly completed machinery electronically by our documentation department.*  
*The intellectual rights of the manufacturer of the incomplete machine are not affected.*

Offenburg, 23.5.2014

Jürgen Killius, Operations Manager

Parker Hannifin GmbH  
Sitz: Bielefeld HRB 35489  
USt-IdNr.: DE 122 802 922  
Steuernummer: 5349 5747 1543

Commerzbank Offenburg  
BLZ 664 400 84  
Konto-Nr. 45 0 19 12 00  
BIC/Swift-Code: COBADE33  
IBAN DE95 6644 0084 0450 1912 00

Geschäftsführung:  
Dr. Gerd Scheffel, Günter Schrank, Ellen Raahede, Kees Vernaart  
Vorsitzender des Aufsichtsrates: Hansgeorg Greuner

## 1.4 ATEX declaration of conformity



Parker Hannifin Manufacturing Germany GmbH & Co KG

Robert-Bosch-Straße 22  
D-77656 Offenburg

Tel.: +49 (0) 781-509-0  
Fax.: +49 (0) 781-509-98

www.parker-eme.com

### EU KONFORMITÄTSERKLÄRUNG EU DECLARATION OF CONFORMITY

ACCORDING TO EU DIRECTIVE 2014/34/EU CONCERNING EQUIPMENT AND PROTECTIVE SYSTEMS INTENDED FOR USE IN POTENTIALLY EXPLOSIVE ATMOSPHERES

Dokumenten Nr. / Declaration No.: **DoC014-R 3.0**

Firma / Manufacturer: **Parker Hannifin GmbH**  
Bevollmächtigter / Authorized person: **Jürgen Killius**

Anschrift / Address: **Robert-Bosch-Straße 22, 77656 Offenburg, Deutschland**

Produkt / Gerät: / Product / Equipment: **ETH: Parker High Force Electro Thrust Cylinder**

Baugrößen / Frame sizes: **ETH032; ETH050; ETH080; ETH100; ETH125**

Ausführungen: **Alle im Bestellschlüssel aufgeführten Optionen**  
Options: **All options which are specified in the order code**

Der oben genannte Hersteller / Bevollmächtigte erklärt, dass das Produkt den folgenden grundlegenden Anforderungen der Richtlinie 2014/34/EU entspricht:  
*The above mentioned Manufacturer / authorized person declare that the product is complying with the following essential requirements of the directive 2014/34/EU:*

Kennzeichnung:  
Designation:

**ETH032 & ETH050:**



**II 2G Ex h IIC T4 Gb**

**ETH080 & ETH100 & ETH125:**



**II 2G Ex h IIB T4 Gb**

Das Konformitätsbewertungsverfahren wurde in Anlehnung an die Richtlinie 2014/34/EU (ATEX) durchgeführt. Die entsprechenden Unterlagen sind bei folgender benannten Stelle (Nr. 2004) hinterlegt:  
*The conformity assessment procedure has been carried out in accordance with Directive 2014/34/EU (ATEX). The relevant documents are deposited at the notified body (No. 2004):*

**Bureau Veritas Consumer Products Services Germany, Businesspark A96, 86842 Türkheim, Germany**

Normen / Standards: Ausgabe / Edition	Titel / Title
EN 1127-1 :2011	Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology
EN ISO 80079-36:2016	Non-electrical equipment for use in potentially explosive atmospheres - Part 36: Basic method and requirements
EN ISO 80079-37:2016	Non-electrical equipment intended for use in potentially explosive atmospheres - Part 37: Protection by constructional safety 'c'

Weitere einschlägige Bestimmungen: Maschinenrichtlinie 2006/42/EG  
*More relevant purposes: Machinery directive 2006/42/EC*

Der in der Betriebsanleitung beschriebenen bestimmungsgemäßen Verwendung und den Sicherheits-, Installations- und Bedienungshinweisen muss Folge geleistet werden.  
*The intended use must be secured. These products must be installed and operated with reference to the instructions in the Product Manual. All instructions, warnings and safety information of the Product Manual must be adhered to.*

Änderungen an den genannten Geräten sind nicht zulässig.  
*Modifications on the named equipment are not permitted.*

Werden die genannten Geräte in eine übergeordnete Maschine eingebaut, so müssen die durch den Einbau entstehenden neuen Risiken durch den Hersteller der neuen Maschine beurteilt werden.  
*If the above-named products are installed in a higher-ranking machine, the new risks arising from their installation must be assessed by the manufacturer of the new machine.*

Offenburg, 25.09.2017  
Jürgen Killius, Operations Manager

Parker Hannifin GmbH  
Sitz: Bielefeld HRB 35489  
USt.-IdNr.: DE 122 802 922  
Steuernummer: 5349 5747 1543

Commerzbank Offenburg  
BLZ 664 400 84  
Konto-Nr. 45 0 19 12 00  
BIC/Swift-Code: COBADEFF  
IBAN DE95 6644 0084 0450 1912 00

Geschäftsführung:  
Dr. Gerd Scheffel, Günter Schrank, Ellen Raahede, Kees Veraart  
Vorsitzender des Aufsichtsrates: Hansgeorg Greuner

## 1.5 Introduction to ATEX

### In this chapter you can read about:

Explosive atmospheres.....	8
Harmonized European ATEX Standard.....	8
Zone classification / device categories.....	8
Type of explosion protection.....	9
Explosion subgroup.....	10
Temperature classes.....	10
ATEX and machinery directive.....	10

### **ATEX = “ATmosphère EXplosible”**

Introduction to the European ATEX directive

### 1.5.1. Explosive atmospheres

Directive 2014/34/EC defines an explosive atmosphere as a mixture of:

a) flammable substances - gases, vapors, mists or dusts

b) and air

c) under defined atmospheric conditions

d) in which, after ignition has occurred, combustion spreads to the entire unburned mixture

(NOTE: dust may not burn entirely after ignition).

A “potentially explosive atmosphere” is an atmosphere which could become explosive due to local and operational conditions. Devices concerned by directive 2014/34/EC are defined as designed for the use in potentially explosive atmospheres.

### 1.5.2. Harmonized European ATEX Standard

The EC accepted two harmonized directives for health and safety.

#### **Requirements for machinery and equipment**

Directive 2014/34/EC (ATEX 95a) defines the minimum safety requirements in EU member states for products used in potentially explosive atmospheres.

#### **Requirements for OEM / user**

ATEX directive 99/92/EC (ATEX 137) sets out the minimum requirements for improving the health and safety protection of workers potentially at risk from explosive atmospheres with regard to workplace, working conditions and the handling of products and materials. This directive classifies the workplace into zones and defines criteria for categorizing the products within the zones.


### 1.5.3. Zone classification / device categories

The table below describes the zones of an installation, where potentially explosive atmospheres may occur. The proprietor must analyze and assess the area, where explosive gas/dust mixes may occur and, if necessary, subdivide them into individual zones. This zone classification permits to select suitable machinery and equipment which can be used in this area.

User			Suitable machinery and devices		
Gas zone	Dust zone	Presence of potentially explosive atmospheres	Equipment Group *	Equipment Category	Area of application (not mining)
0		Permanently, often, for a long period	II	1G	Gases, mist, vapor
	20	approx. > 1000 h / year	II	1D	Dust
1		occasionally approx. 10 ... 1000 h / year	II	2G	Gases, mist, vapor
	21		II	2D	Dust
2		rarely, for a short period, in the event of an error	II	3G	Gases, mist, vapor
	22	approx. < 10 h / year	II	3D	Dust

\* Equipment for use in areas (except underground in mining) which might be dangerous due to an explosive atmosphere.

**Example:**

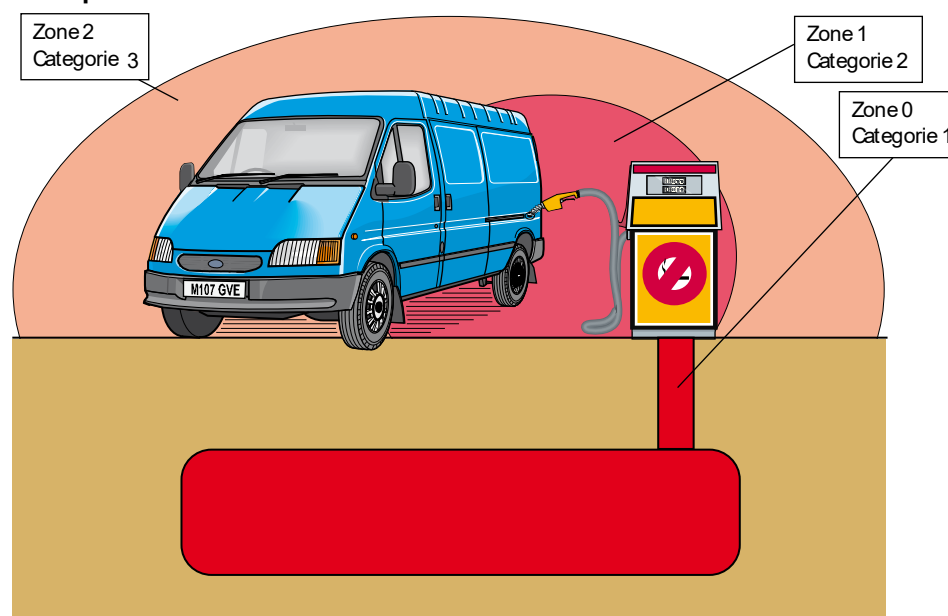

### 1.5.4. Type of explosion protection

In addition to category and device class, which are the minimum required information, the device or component designation gives additional information with reference to the type of protection and explosion group for gases and mists. The type of explosion protection defines which method or measures is/are used for explosion protection in given equipment or individual components. For non electric equipment, the following types of explosion protection are possible:

Type of explosion protection	Designation	Applied standard
Pressurized encapsulation	d	EN 13463-3
Pressurized enclosure	p	EN 13463-7
Intrinsic safety	g	EN 13463-4
Gas retardant enclosure	h	EN 13463-2 (except category 1)
Constructional safety	c Ex h	EN 13463-5 ISO 80079-37 <sup>1)</sup>
Ignition source monitoring	b Ex h	EN 13463-6 ISO 80079-37 <sup>1)</sup>
Liquid immersion	k Ex h	EN 13463-8 ISO 80079-37 <sup>1)</sup>

<sup>1</sup> The ISO standard 80079-37 replaces the standard series DIN EN 13463 Parts 1,5,6 and 8.

### 1.5.5. Explosion subgroup

The explosion group is an indicator for the inflammability (explosive potential) of gases (explosive atmospheres). The requirements for the equipment increase from IIA to IIC.

Explosion subgroup	Examples for gases
IIA	Propane, acetone, ammonia, gasoline, benzene, diesel fuel, heavy fuel, methane, methanol, propane
IIB	Ethylene, ethyl alcohol, hydrogen sulphide
IIC	Hydrogen, carbon disulphide, acetylene

Gas explosion subgroups of the Parker ETH electro cylinder (see page 11).

### 1.5.6. Temperature classes

Classification of flammable gases and vapors depending on their ignition temperature:

Class	Maximum permitted material surface temperature [°C]
D1	450
T2	300
T3	200
T4	135
T5	100
T6	85

For flammable substances, the temperature class and the maximum permitted surface temperature of the equipment are of essential importance.

### 1.5.7. ATEX and machinery directive

The ATEX directive is in effect since July 1st. 2003 and replaces the individual laws of the respective countries with reference to explosive atmospheres. While previously only referring to electrical devices, the directive now does also comprise mechanical, hydraulic and pneumatic devices.

With reference to the machinery directive 2006/42/EC it must be taken into consideration, that a number of external requirements stated in the ATEX directive 2014/34/EC refers to dangers occurring in explosive atmospheres, whereas the machinery directive does only list requirements for explosion protection.

Hence, the ATEX directive 2014/34/EC is superior to the machinery directive with reference to explosion protection in potentially explosive atmospheres. The requirements of the machinery directive are however valid for all other dangers when operating machines.

## 1.6 ETH ATEX marking

Parker ETH - Electro Cylinder with the ATEX supplement are certified for use in explosive gas atmospheres (device group II, category 2G).

An ETH Electro Cylinder with the ATEX supplement complies with the requirements of the EC directive 2014/34/EC. Below you can find an explanation of the features and areas of usage resulting from the ATEX marking:



### ETH032 & ETH050: II 2G Ex h IIC T4 Gb

- II Equipment group II, all areas, except underground (mining)
- 2G Zone 1, 2, gas explosion category 2G, 3G
- Ex h constructional safety in accordance with ISO 80079-37 <sup>1)</sup> ("c" according to DIN EN 13463-5)
- IIC suitable for explosive areas IIA, IIB and IIC.  
Typical gases: Hydrogen  
Ignition energy: >45 µJoule
- T4 Temperature class 4  
Ignition temperature of flammable substances > 135°C
- Gb Equipment protection level (EPL) according to IEC 60079-0  
Gb: device with high protection level



### ETH080; ETH100, ETH125: II 2G Ex h IIB T4 Gb

- II Equipment group II, all areas, except underground (mining)
- 2G Zone 1, 2, gas explosion category 2G, 3G
- Ex h constructional safety in accordance with ISO 80079-37 <sup>1)</sup> ("c" according to DIN EN 13463-5)
- IIB suitable for explosion region IIA and IIB.  
Typical gases: Ethylene  
Ignition energy: >160 µJoule
- T4 Temperature class 4  
Ignition temperature of flammable substances > 135°C
- Gb Equipment protection level (EPL) according to IEC 60079-0  
Gb: device with high protection level

<sup>1</sup> The ISO standard 80079-37 replaces the standard series DIN EN 13463 Parts 1,5,6 and 8.

### Classification

Equipment group	Equipment Categories	Protection class	Explosion group	Temperature class	Equipment protection level	ETH frame size
II	2G	Ex h	IIC	T4	Gb	ETH032 ETH050
			IIB			ETH080 ETH100 ETH125

Equipment group	Equipment Category	Area	Protection level EPL	Level of safety	Inflammable Substances	Protection class	Explosion group	Temperature class
I Mines (Underground / mining)	II Surfaces (all areas, except underground / mining)	1G	Ga	Very high	Gas	d	IIA	T1 < 450 °C
		2G	Gb	high		p	IIB	T2 < 300 °C
		3G	Gc	normal		g	IIC	T3 < 200 °C
		1D	As	Very high	Dust	h		T4 < 135 °C
		2D	Db	high		Ex h		T5 < 100 °C
		3D	Dc	normal				T6 < 85 °C

ETH ATEX can be used in these areas.

## 1.7 Applications in accordance with the Regulations

The incomplete machine can only be set in operation if it is sure that the machine in which the incomplete machine shall be mounted is conform to the 2006/42/EG machine directives.

Without further measures the product is not suitable for safety-oriented tasks. The linear actuator must only be used in areas that are not accessible to persons during operation.

If the linear actuator is used in areas accessible to people, it must be installed in such a manner that no one can be endangered during operation.

The described safety, installation and operating instructions must be adhered to. General functioning consists in converting a rotational movement in a linear movement without slip within the product related load limits.

Can be found in the catalogue [http://solutions.parker.com/eth\\_support](http://solutions.parker.com/eth_support).

Its applications are in industry and trade.

The linear actuator is used for: Positioning, transporting, feeding, removing, pallet handling, loading, unloading, processing and manipulating as well as testing work pieces or tools. Since the component can be used in a very wide range of applications, the user is responsible for its use in specific applications.

### ATEX specific requirements

***Strict adherence to the intended use of ATEX certified cylinders is the absolute prerequisite for their use in explosive atmospheres.***

While using the ETH cylinder as intended, the ignition temperature will not be exceeded in any part of the ETH cylinder. The ETH cylinder is heated by the thermal effect of the motor or the gearbox as well as by the frictional heat generated by the spindle nut and the bearings, the latter however only if the cylinder is in motion. The relevant heating occurs with high force, travel speed and cycle time of the spindle nut. Therefore, the thermal behavior of the ETH cylinder must be taken into consideration when dimensioning a drive application. The application and therefore the temperature behavior must be checked on the basis of force - velocity - diagrams. An application specific measurement and certification is also possible for critical applications or for further optimization. Please observe the Project notes (see page 23) as well as the document "ETH ATEX: Basic conditions for the use". [http://solutions.parker.com/eth\\_support](http://solutions.parker.com/eth_support)

Besides the heating behavior of the cylinder, the following boundary conditions must be respected when using the cylinder in explosive atmospheres:

- ◆ The ETH is especially designed for the use in explosive atmospheres in accordance with the specifications of the ATEX directive 2014/34/EU.
- ◆ The operation of the electro cylinder is only permitted within the application data checked via force velocity diagrams or application specific measurement.

### Furthermore, it applies for the intended use:

- ◆ The ETH can be used in defined explosive atmospheres (see page 11).
- ◆ The shortened lubrication intervals applicable for ATEX are mandatory.
- ◆ In short-stroke applications (stroke shorter than 2.5 times the screw lead), the specified lubricating runs must be performed as described in the operating/mounting instructions.

- ◆ The cylinders must be replaced after 90 % of the attainable service life.
- ◆ The permitted maximum lateral force on the thrust rod = 0.
- ◆ No additional thermal effect due to a mechanical connection of the thrust rod with a workpiece fixture or such, which might lead to a heating of the screw nut.
- ◆ The product is designed for professional use and is not intended for private use.
- ◆ Operational safety of the ETH is only guaranteed with intended use.
- ◆ When installing the ETX ATEX please make sure that the ambient temperature of 40 °C is not exceeded (enough convection, ...).
- ◆ The heat input by the drive (motor, gearhead) shall not exceed 135 °C. We recommend using a motor or gearhead with temperature class T4 or higher.

### 1.7.1. Applications not in accordance with the intended use

For risks of applications not in accordance with the intended use, the user shall bear the sole responsibility. Parker Hannifin does not accept any liability for damages caused by applications not in accordance with the intended use of the product.

## 1.8 Operator's obligations

Legal requirements for the operator are directive 99/92/EC (ATEX 137) as well as the implementation of the industrial safety regulation, which is supported by the technical rules BG 104, BG 134 and TRBS 2152 and others.

The most important topics for explosion protection on the operator side are:

- ◆ Grading and classification of explosive areas
- ◆ Criteria for the selection of devices and protective systems
- ◆ Explosion protection document (with risk assessment, measures taken, zone classification, requirements for equipment, plant must be designed, operated and maintained safely)
- ◆ Minimum requirements for increased safety and health protection of the employees, who might be in danger due to explosive atmospheres

Furthermore, the following responsibilities of the operator apply for the use of the ETH ATEX cylinder:

- ◆ Making sure that the intended use is observed
- ◆ The operator of the entire system must ensure that the ETH is mounted by authorized and qualified personnel only. Authorized personnel means trained specialized employees of the customer, the manufacturer or of a service partner, who work in accordance with the specifications for explosion protection.
- ◆ Regular instruction of the operating personnel
- ◆ Taking dangers of ignition resulting from the installation of equipment into a system into consideration.
- ◆ Do NOT try to make unauthorized repairs. In this case, please do contact Parker.

## 1.9 For Safety Use

### In this chapter you can read about:

General hazards .....	14
Identifying Residual Dangers and Hazardous Areas .....	14
Working safely .....	14
Safety Instructions for the Company Using the System .....	15
Safety Instructions for Operating Personnel .....	15
ATEX specific safety instructions .....	16

### 1.9.1. General hazards

#### **General Hazards on Non-Compliance with the Safety Instructions**

The subsystem has been designed in accordance with state-of-the-art technical developments and is operationally reliable. If it is not operated by qualified or at least trained personnel or if it is operated improperly or not in accordance with the operating instructions, however, the unit may bear the risk of hazards.

Electronic, moving and rotating components can

- ◆ cause danger for life and limb of the operator or third persons and / or
- ◆ cause material damage

If the linear actuator is installed in a machine plant, the safety requirements noted in the operating instructions for that machine must be combined with those described in this manual.

### 1.9.2. Identifying Residual Dangers and Hazardous Areas

If there are still residual dangers present to persons or property from the linear actuator in spite of operating it in a safe manner, the user must make reference to these residual dangers through signs and written rules requiring appropriate procedures.

#### The following safety signal words are used:



Indicates that an imminent hazardous situation may lead to death or serious bodily harm if not prevented using appropriate safety measures.



Indicates a potentially hazardous situation which, if not avoided using appropriate safety measures, could result in serious or minor injury.



Indicates a potentially hazardous situation which, if not avoided using appropriate safety measures, may result in minor injury or material damage.



Provides important information about the product, how to handle the product or about the part of the manual to which particular attention must be paid.

### 1.9.3. Working safely



The information (such as instructions and notes) contained in this manual must be heeded for all work involved in installing, commissioning, setting up, operating, changing operating conditions and modes, servicing, inspecting and repairing the unit.

The manual must be available close to the linear module during the performance of all tasks.

It is impermissible to operate the liner module if it is not in perfectly functional condition.

#### **Operating personnel**

Only qualified expert personnel is permitted to perform works on the linear actuator. All the applicable regulations and provisions must be heeded (IEC, EN, national accident prevention regulations etc.).

Qualified persons as the term is used in this manual are persons who:

- ◆ persons who, by virtue to their training, experience and instruction, and their knowledge of pertinent norms, specifications, accident prevention regulations and operational relationships, have been authorized by the officer responsible for the safety of the system to perform the required task and in the process are capable of recognizing potential hazards and avoiding them (definition of skilled persons in accordance with VDE015 or IEC364)
- ◆ Persons who have a knowledge of first-aid techniques and the local emergency rescue services.
- ◆ Persons who have read and will observe the safety instructions.

### **DANGER**

#### **Instructions for Special Hazards**

The linear module must be fixed or supported in accordance with the indications in this manual.

The operator must ensure that operation of the linear module does not cause any danger.

If the linear module moves in hazardous areas, these areas must be safeguarded with safety transmitter switches.

## **1.9.4. Safety Instructions for the Company Using the System**

### **WARNING**

Supervisors must also become familiar with the entire chapter entitled "Safety" and handling required on the linear actuator.

Supervisors must ensure that installation and operating personnel have read and understand the chapter entitled "Safety" and the description of how to work with the machine, and that they observe the instructions.

The manual must be available close to the linear module during the performance of all tasks.

It is impermissible to operate the liner module if it is not in perfectly functional condition.

Depending on the application, the operating company must provide for a suitable separating safety fence. Access to the motion range during operation must be prevented.

The user must make sure that the work area is protected by appropriate safety devices.

## **1.9.5. Safety Instructions for Operating Personnel**

### **WARNING**

Any work step that has a negative effect on the operating safety of the linear motor module must be omitted.

Operating and supervisory personnel are required to check the linear actuator or machine at least once per shift for externally visible damage or defects. Changes that have occurred (including the operating behavior) that could have a negative effect on the operating safety must be reported immediately.

Components and accessories are designed especially for this product. When purchasing spare and wear parts, use only original Parker parts. We explicitly draw your attention to the fact that we are unable to check or release spare parts or accessories that were not provided by us. Installing and/or using such products may cause negative changes in the required design properties in some circumstances, which in turn could negatively effect the active and/or passive operating safety of the product.

The manufacturer is unable to accept any liability for damage caused by using non-original parts and accessories.

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.

Safety and protection devices are strictly NOT to be removed or bypassed or set out of order.

Applicable requirements and national accident prevention regulations must always be observed when installing and operating our linear motor module.

## 1.9.6. ATEX specific safety instructions

### 1.9.6.1 ATEX specific safety instructions



If the operating instructions and the technical specifications are not respected, the declaration of conformity expires in accordance to the ATEX directive 2014/34/EG.

### 1.9.6.2 General safety instructions - ATEX



The operator of the entire system must ensure that the ETH is mounted by authorized and qualified personnel only. Authorized personnel means trained specialized employees of the customer, the manufacturer or of a service partner, who work in accordance with the specifications for explosion protection. The linear actuators may not be modified with respect to the design or safety-related features without the written approval of Parker Hannifin Manufacturing Germany GmbH & Co. KG. Any unauthorized modification in this respect will exclude any liability on the part of Parker Hannifin Manufacturing Germany GmbH & Co. KG.

- ◆ It is strictly forbidden to dismount or disable safety and protection devices.
- ◆ In addition, the following rules and regulations apply as a matter of course:
  - ◆ the applicable regulations for health and safety at work,
  - ◆ generally accepted rules for the safe operation of machinery,
  - ◆ the EC Directives and
  - ◆ any special regulations of the respective country/state.

### 1.9.6.3 Product specific safety instructions



#### **Danger of explosion when working in explosive atmospheres!**

- ◆ If the system where the cylinder is to be mounted is surrounded by an explosive atmosphere, it may ignite during work.  
Do always respect the local installation regulations.

#### **Danger of explosion due to spark formation!**

- ◆ Electrostatic charge of the cylinder may lead to sparks and cause danger of explosion in explosion protection zones.  
Avoid electrostatic charge.  
The cylinder must be grounded and be a part of the grounding concept. Ground cylinder via the motor and the cylinder mounting (machine frame).

#### **Mechanical charges cause sparks and danger of explosion.**

- ◆ Never expose the cylinder to powers of impact during transport, mounting and operation.
- ◆ Some thrust rod ends and mounting methods permit oscillating rotational and pivoting movements of the cylinder. If these elements are used:  
Make sure, that circumferential speeds at the friction surfaces do not exceed 1 m/s.
- ◆ Never twist or bend the cylinder or fix it under stress.
- ◆ Avoid incorrect load mounting at the thrust rod end, see chapter 4: Commissioning.

**Furthermore, it applies for the intended use:**

- ◆ The ETH can be used in defined explosive atmospheres (see page 11).
- ◆ The shortened lubrication intervals applicable for ATEX are mandatory.
- ◆ In short-stroke applications (stroke shorter than 2.5 times the screw lead), the specified lubricating runs must be performed as described in the operating/mounting instructions.
- ◆ The cylinders must be replaced after 90 % of the attainable service life.
- ◆ The permitted maximum lateral force on the thrust rod = 0.
- ◆ No additional thermal effect due to a mechanical connection of the thrust rod with a workpiece fixture or such, which might lead to a heating of the screw nut.
- ◆ The product is designed for professional use and is not intended for private use.
- ◆ Operational safety of the ETH is only guaranteed with intended use.
- ◆ When installing the ETH ATEX please make sure that the ambient temperature of 40 °C is not exceeded (enough convection, ...).
- ◆ The heat input by the drive (motor, gearhead) shall not exceed 135 °C. We recommend to use a motor or gearhead with temperature class T4 or higher.

** DANGER**

Only Ex certified devices (e.g. motors, gearboxes, limit sensor or force sensors) which adhere to potentially explosive environments are allowed to be mounted on the ETH ATEX. In the case of ETH ATEX this would be equipment category 2G (for Area1), explosion area IIB resp. IIC and temperature class T4. The rule for this is always the lowest ATEX Classification of the EX devices used.

** DANGER**

If the customer installs and operates the ETH ATEX with e.g. motor, gearbox, sensors, etc., the user must ensure that no new sources of ignition are created by assembling and operating the ETH ATEX with other EX devices. Please observe the proper use of the individual EX devices.

**NOTICE**

Depending on the data operating the ETH ATEX and the ambient temperature, the surface of the electro cylinder can heat up to maximum 80°C due to its inside losses. Please consider this when dimensioning the drive options (motors resp. motor-gearhead combination).

## 1.10 Packaging, storage, transport

**First check**

- ◆ Check the packaging for damages.
- ◆ Remove all items from the packaging.  
Do not discard the packaging; it is strongly recommended to use the original packaging material for return deliveries.
- ◆ Depending on the storage location, metal surfaces may have a temperature of 0 °C or below. Please provide appropriate worker protection (e.g. protective gloves).
- ◆ Please ensure that the consignment does correspond to your order.
- ◆ Check the product for damages. Do never use a device which seems damaged.
- ◆ Please read the installation manual carefully before installing or commissioning the device.

**Packaging material**** WARNING**

The packaging material is inflammable, if it is disposed off improperly by burning, lethal fumes may develop.

**Transport**

Make sure to transport the linear module always in a safe manner and with the aid of suitable lifting equipment (Means of transport).

## Storage

The linear module must be stored evenly and without any mechanical load.  
The stated storage temperature must be adhered to.  
For a storage period longer than 1 year, the linear module must be relubricated before commissioning.

## Disposal

We recommend to dispose off the respective materials in accordance with the respectively valid environmental laws. The following table states the materials suitable for recycling and the materials which have to be disposed of separately.

Material	suitable for recycling	Disposal
Metal	yes	no
Plastic materials	yes	no

### 1.10.1. Special notes on transport

When using ropes, make certain they are not twisted or knotted. If you are using more than one rope, all the ropes should be equally taut.  
When transporting the cylinder with a forklift, establish an equilibrium and secure the load if necessary.



## WARNING

Never step under overhead loads danger of being injured!  
Use only transport equipment with sufficient lifting capacity. Take care of structural safety when using lifting equipment!  
Moving parts must always be secured against slipping or moving.

### Maximum weight of the ETH Electro Thrust Cylinder with Parker drive

ETH032	ETH050	ETH080	ETH100	ETH125
20 kg	40 kg	100 kg	220 kg	490 kg

The weights mentioned are max. values. They contain the max. stroke, the heaviest options and the largest drives.

The following threads on the cylinder can be used to fix transport or mounting appliances (e.g. eye bolts):

### Motor inline: ETH032 ... ETH080

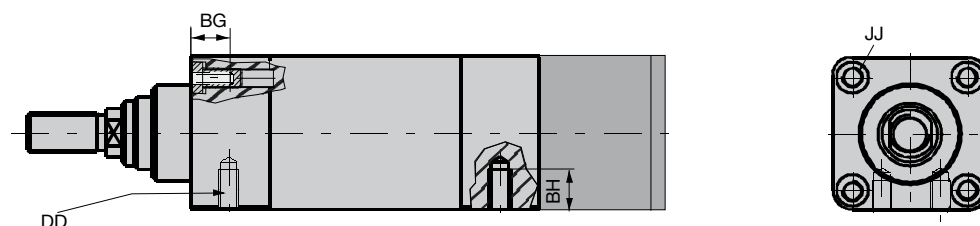


Figure 1: Motor inline: ETH032... ETH080

### Motor parallel: ETH032 ... ETH080

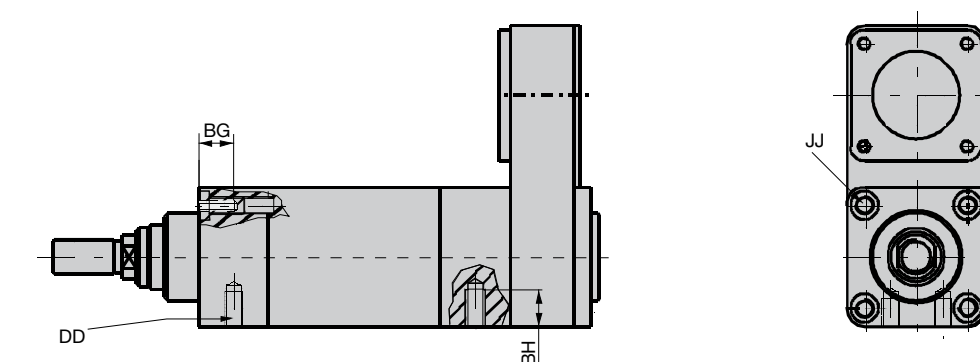


Figure 2: Motor parallel: ETH032... ETH080

	Unit	ETH032	ETH050	ETH080
DD <sup>(1)</sup>	mm	M6x1.0	M8x1.25	M12x1.75
YY	mm	M6x1.0	M8x1.25	M10x1.5
BH	mm	9	12.7	18.5
BG	mm	16	25	26

<sup>(1)</sup> Thread "DD" available with mounting method "F".

#### Note the following points:

- ◆ Please make sure that at least two eye bolts are used and that the load on all eye bolts is evenly distributed.
- ◆ Full load of the eye bolts in a maximum angle of 45° (see Figure 4).
- ◆ Don't use lateral traction (see Figure 5).
- ◆ Before use the eyes bolts must be checked that they are firmly seated and not damaged.
- ◆ The eye bolts are level and grid with the surface.
- ◆ Deformed eye bolts should not be used and screwed anymore.
- ◆ Supplied eye bolts are not made of stainless material and must therefore be removed after installation of IP65 or VA-option.
- ◆ In case the cylinder is dismantled from the machine at a later time, new eye bolts must be used due to safety reasons!



Figure 3: eye bolt

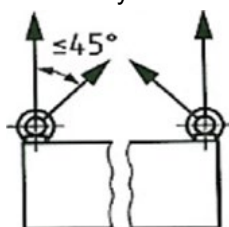


Figure 4: maximum angle of eye bolt

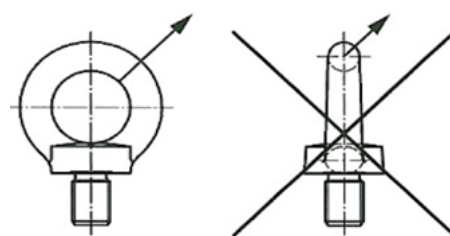


Figure 5: eye bolt without rope pull

#### Motor inline: ETH100&125

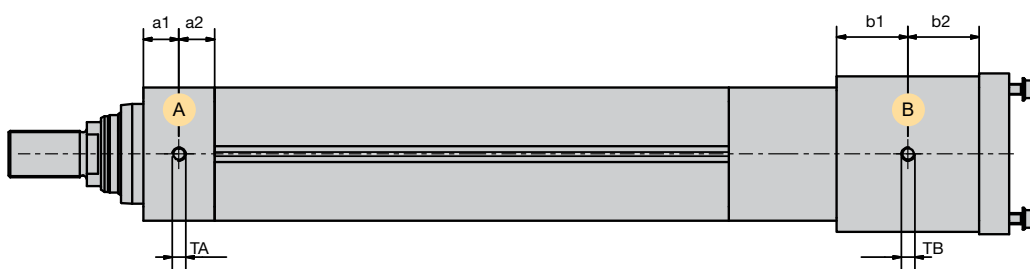


Figure 6: Transport instructions ETH100&125 inline

Area A: Front cap

Area B: Inline coupling housing

Thread TA and TB: on all four sides

### WARNING

From frame size ETH 100 on, the provided M12 threads ((see Figure 6 and Figure 7) must be used together with M12 external thread eye bolts in accordance with DIN 580.

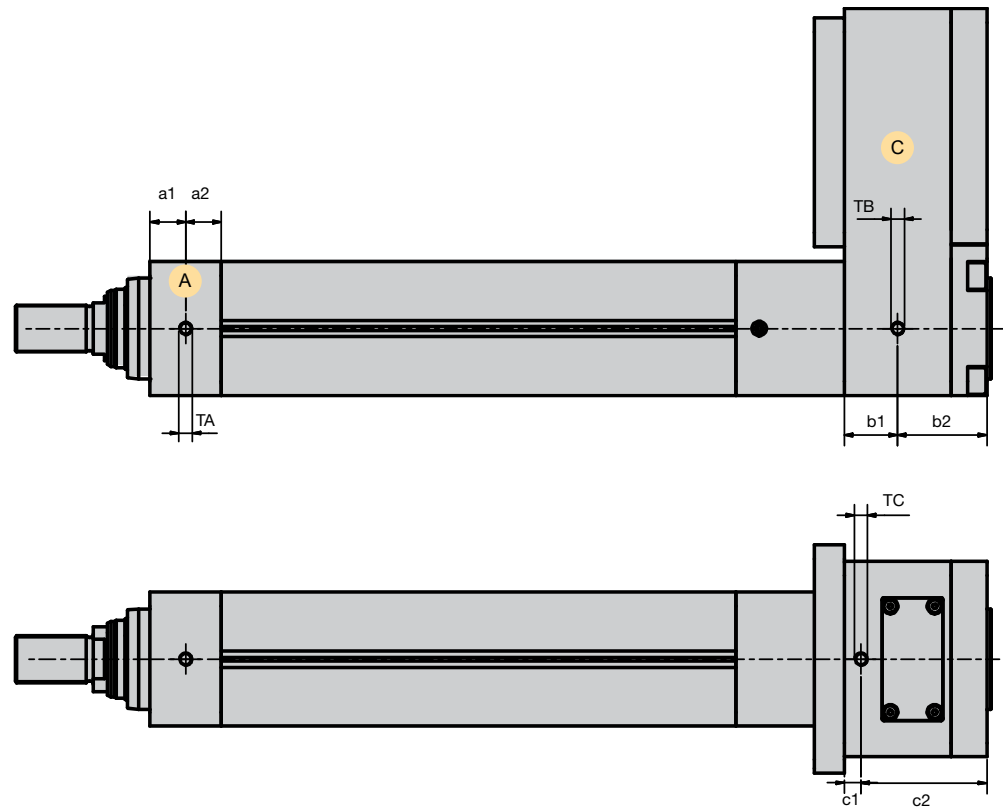
**Motor parallel: ETH100&125**

Figure 7: Transport instructions ETH100&125 parallel

Area A: Front cap

Area C: Parallel housing

Thread TA: on all four sides

Thread TB: also on the opposite side, but not on the underside

	Unit	ETH100		ETH125	
		inline	parallel	inline	parallel
a1	mm	32	32	55	55
a2	mm	32	32	50	50
b1	mm	64	48	72	61.5
b2	mm	64	80	72.5	101.5
c1	mm	--	15	--	24
c2	mm	--	113	--	139
TA	mm	M12x12	M12x12	M12x18	M12x18
TB	mm	M12x12	M12x15	M12x22	M12x25
TC	mm	--	M12x18	--	M12x25

## 1.11 Terms of guarantee / warranty

These operating instructions are subject to changes including changes in technical details with respect to the information and Figures contained herein.

Parker Hannifin Manufacturing Germany GmbH & Co. KG grants no quality or durability guarantees nor any guarantees as to the suitability for specific purposes. Such guarantees must be expressly agreed upon in writing.

Public statements, recommendations or advertising do not in any way represent quality specifications.

The warranty rights of the user imply that he reports any fault immediately and describes it precisely in his notice of defects. Parker Hannifin Manufacturing Germany GmbH & Co. KG is not responsible under any circumstances for damage to the product itself or any consequential damage caused by the product resulting from improper handling of the product. If Parker-Hannifin Manufacturing Germany GmbH & Co. KG is responsible for a defect, Parker-Hannifin Manufacturing Germany GmbH & Co. KG shall be authorized, at its discretion, to undertake improvements or deliver replacements.

In compliance with ISO 9000, all products are equipped with a type plate and a note of care that are bound to the device. The type plate must not be removed or damaged under any circumstances.

Parker Hannifin Manufacturing Germany GmbH & Co. KG shall not be held liable, regardless of any legal basis, except for cases of intent or gross negligence; injuries to life, body or health; or defects of malicious nondisclosure or whose absence was expressly guaranteed in writing.

Furthermore, if there is compulsory liability under the Product Liability legislation for personal injury and property damage to privately used objects, in the event of negligent breach of significant contractual obligations, Parker Hannifin Manufacturing Germany GmbH & Co. KG shall also be liable for cases of ordinary negligence; however, this is limited to damages that are contractually typical and foreseeable.

Further claims are hereby excluded.

The warranty shall lapse in the event of non-compliance with these operating instructions, the relevant statutory provisions and other information provided by the supplier.

In particular, we are not responsible for failures caused by modifications made by the customer or other parties. In such cases, the normal repair costs will be calculated. These costs will likewise be calculated for a check of the unit if no fault can be determined on the unit.

This regulation also applies during the warranty period.

No claims exist as to the availability of previous versions or to the retrofitting capacity of the units delivered to adapt them to the respectively current model version.

### **User conversions and changes are not Permitted**

The linear actuator must not be changed in its design or in terms of safety without our approval. Any change as defined here made by the user excludes any liability on our part.

## 1.12 Conditions of utilization

### General introductory notes

With the electro cylinder you bought a product which was manufactured and tested before delivery with the utmost care.

Please take your time to read the following notes which you ought to follow closely during setup and operation.

The operation of the electro cylinder is only permitted within the limit values stated in this manual.

Unless, all claims under the warranty will become void and a reduced service life or even damages must be expected.

**Please compare the operating data with the stated limit values especially with reference to:**

- ◆ Stroke length and setting of the limit switches, those must be set so that there is a sufficient safety travel at both ends of the travel stroke

### NOTICE

Even if the limit switches were already mounted at our premises, they must be adapted according to suitable values before operation!

- ◆ Thrust and traction force in the effective direction
- ◆ Lateral force (e.g. as a component of the effective force, but also due to own weight on horizontal mounting, especially with parallel motor mounting and long travel strokes)
- ◆ Speed
- ◆ Acceleration
- ◆ Environmental conditions (e.g. temperature, contamination)
- ◆ Please do take possible pulses caused by moved masses into consideration for the operating data. (Even small abrupt loads can cause damage, especially if they occur rather often at the same place.)

**The limit values for the thrust and traction force, lateral force, speed and acceleration are partly influenced by several factors and can change depending on:**

- ◆ The size of the electro cylinder
- ◆ Screw lead
- ◆ Direct or parallel drive via toothed belt transmission
- ◆ Mounting method
- ◆ Mounting orientation vertical or horizontal resp. inclined
- ◆ Travel Stroke

### Note on cylinder mounting



### DANGER

Do always use all available mounting possibilities and respect the requirements listed in chapter "Screw tightening torques for the mounting of the ETH cylinder by the customer". (see page 25)

If the motor used with the electro cylinder should be able to exceed individual limit values of the cylinder, the respective values for the motor must be limited in the control by appropriate parameterization. The parameterization should even be reduced down to the values necessary for operation.

This would, for example provide a hint to a possible damage or to preventive maintenance if wear-induced extensive friction of the machine or cylinder would trigger an error message of the controller.

**⚠ CAUTION**

The internal end stops of the electro cylinder may under no circumstances be accessed during operation. The internal end positions may only be accessed by the cylinder in setup mode and only for determining the end positions resp. for relubrication with a low force of a few N (torque limitation if possible below 10 %) and very slowly (max. 2 % of the nominal speed).

The lifetime of the electro cylinder depends strongly on the degree of power exploitation and on impermissible operating states occurring - even if only for a short time.

**⚠ CAUTION**

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.

## 1.13 Planning of the ETH Electro Cylinder for EX-Environment

### Procedure for project development of the ETH Electro Cylinder for explosive environment

	Responsibility/ Cooperation	Procedure	Documents
1.	Operator	<b>Check der Basic conditions for ATEX</b> Please check by means of this document whether the basic conditions for the use of the ETH Electro Cylinder in explosive environment are possible.	ETH ATEX: Basic conditions for the use, chapter 1 to 3 Part No.: 192-550006
2.	Operator	<b>Planning of the ETH - Electro Cylinder</b> Please plan and design the ETH - Electro Cylinder for your application by means of the ETH product catalogue	ETH Product Catalogue Part No.: 192-550003
3.	Operator	<b>Check the heating of the ETH Electro Cylinder</b> Determine your ATEX application data and check by means of the Force Velocity Diagram (ETH032, ETH050 and ETH080 only) if the heating of the selected ETH Electro Cylinder is within the accepted range of the required data application (if so, continue with 5.) For ETH100 and ETH125 an application specific approval is necessary (continue with 4.2)	ETH ATEX: Basic conditions for the use, chapter 5 Part No.: 192-550006
4.	Operator	<b>Adaption of the ETH Electro Cylinder or of the application data</b> In case the heating of the selected ETH with the required application data is outside the permitted area you can continue as follows:	
4.1	Operator	- Select larger ETH Electro Cylinder (size of cylinder, Pitch), - Reduce the application data (Force, Speed or Duty cycle) or	
4.2	Parker / User	- Ask for a application specific release	
5.	Operator	<b>Ordering the ETH Electro Cylinder with ATEX Option</b> If the heating of the ETH Electro Cylinder is within the permissible are of the F-v-Diagram (a) or if an application specific release (b) from Parker Hannifin is necessary, the selected ETH can be used within the ATEX application described. a) standard ATEX Cylinder, A No.: 000 b) application specific ATEX release, A-No.:xxx	

## 2. Commissioning

### In this chapter you can read about:

Mounting.....	24
Electrical installation .....	29
Motor/ gear assembly .....	32

Read safety instructions (see page 14) before taking into operation!

If no Parker drive is provided, attach your motor-gearbox combination according to the instructions in chapter motor and gearbox assembly (see page 32).

Also observe the notes in the assembly instructions for the motor/gear unit combination used.

The technical data of the individual components must always be respected.

### **DANGER**

Depending on the application, the operating company must provide for a suitable separating safety fence. The access to the motion area of the ballscrew and piston rod should be prevented during operation.

### **NOTICE**

The sound may vary from cylinder to cylinder. It depends on the motor/gearbox, different drive options or on the production series due to different production lots. Different sounds do not provide any hint as to the lifetime of the cylinder.

### **CAUTION**

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation.

### **NOTICE**

When installing the HLR linear axes in your system, make sure that the deflection stations and the carriage are accessible for maintenance purposes! Greasing option see ETH catalogue ([solutions.parker.com/ETH\\_support](https://solutions.parker.com/ETH_support)).

## 2.1 Mounting

### In this chapter you can read about:

Mounting with mounting threads on the cylinder .....	25
Mounting with mounting accessories .....	25
Mounting of the payload .....	28

### **WARNING**

Before carrying out any assembling work make sure the piston rod cannot move. Therefore, de-energize the respective drives. The internal ballscrew drive is not self-locking! Always take care, especially in vertical position of the ETH cylinder that the piston rod must be secured against moving out

### **WARNING**

Do only use the appropriate mounting parts offered in the Parker product catalogue for the respective mounting methods. These mounting parts are especially designed for the ETH.

### **CAUTION**

Please note:

The cylinder housing must be mounted without tension or contortion.  
The cylinder housing must be precisely aligned to the load direction of motion.  
Occurring lateral forces on the cylinder must be taken into consideration.

## 2.1.1. Mounting with mounting threads on the cylinder

The easiest and most economic method of mounting is using the available mounting threads on the cylinder body (mounting option F, dimensions: see ETH catalogue). Make sure that the mounting surface is level and that the cylinder is mounted without tension and contortion. This method of mounting is only possible, if the lower side of the mounting surface is accessible.

### NOTICE

ETH100&125 does **not have** a mounting thread at the bottom of the cylinder.

### NOTICE

For cylinders in IP version, the cylinder is enclosed in a protective coating with possibly not constant layer thickness. Therefore it can happen that when using the front or rear mounting surfaces (only for parallel motor mounting) the alignment of the cylinder deviates from the ideal 90° position.

## 2.1.2. Mounting with mounting accessories

Mounting methods: please refer to ETH catalogue.

Dimensions: please refer to ETH catalogue.

Permissible lateral force: please refer to the ETH support side in the ETH catalogue.

### 2.1.2.1 Cylinder mounting with mounting plates or foot mounting brackets

If the underside of the mounting surface is not accessible, mounting plates or foot mounting brackets are available as accessories.

The rear mounting plate (mounting type H) cannot be fixed with inline motor configuration.






If you fix the cylinder only at the rear end (e.g. also with a rear clevis) please respect the effective direction of the known forces. Critical are above all lateral forces in horizontal or vertical direction.






### 2.1.2.2 Screw tightening torques for the mounting of the customer's ETH cylinder

In order to simplify the calculation of the mounting screws for fixing the cylinder in your application, the following Table gives an overview of the required screw quality resp. the required tightening torque (including additional boundary conditions), under the assumption that 100 % of the permissible axial force are required. Additionally, take care that no other loads act on the screws.

### ⚠ WARNING

If these specifications are not adhered to, the screw joint might fail. The failure of screw joint may lead to severe injuries.

Mounting type		ETH032			ETH050			ETH080			
		M05	M10	M16	M05	M10	M20	M05	M10	M32	
Option F*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		15.5 <sup>3</sup>			47 <sup>3</sup>			160 <sup>3</sup>	160 <sup>3,4</sup>	160 <sup>3</sup>	Screw tightening torque <sup>1</sup> [Nm]
		6			8			12			Minimum screw-in depth [mm]
Option F		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		7.5			16			34			Screw tightening torque <sup>1</sup> [Nm]
		9			9			16			Minimum screw-in depth [mm]
Option F		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		9			19			39			Screw tightening torque <sup>1</sup> [Nm]
		9			9			16			Minimum screw-in depth [mm]
Option E Option C		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		8			16			34			Screw tightening torque <sup>1</sup> [Nm]
		8			12			15			Minimum screw-in depth <sup>2</sup> [mm]
Option E Option C		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		8			16			34			Screw tightening torque <sup>1</sup> [Nm]
		8			12			15			Minimum screw-in depth <sup>2</sup> [mm]

Mounting type		ETH032			ETH050			ETH080			
		M05	M10	M16	M05	M10	M20	M05	M10	M32	
Option H Option J Option N		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		7			16			31			Screw tightening torque <sup>1</sup> [Nm]
		8			11			14			Minimum screw-in depth <sup>2</sup> [mm]
Option H Option J Option N		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		7.5			18			35			Screw tightening torque <sup>1</sup> [Nm]
		9			12			15			Minimum screw-in depth <sup>2</sup> [mm]
Option B*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		16.5			47			160 <sup>3</sup>	160 <sup>3,4</sup>	160 <sup>3</sup>	Screw tightening torque <sup>1</sup> [Nm]
		12			12			25			Minimum screw-in depth <sup>2</sup> [mm]
Option G*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		16.5			47			160 <sup>3</sup>	160 <sup>3,4</sup>	160 <sup>3</sup>	Screw tightening torque <sup>1</sup> [Nm]
		12			12			25			Minimum screw-in depth <sup>2</sup> [mm]
Option R (5)		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		9			19			39			Screw tightening torque <sup>1</sup> [Nm]
		9			9			16			Minimum screw-in depth <sup>2</sup> [mm]

Mounting type		ETH100		ETH125		
		M10/M20		M10/M20		
Option F*		not possible		not possible		Screw
		not possible		not possible		Screw tightening torque <sup>1</sup> [Nm]
		not possible		not possible		Minimum screw-in depth [mm]
Option F		M16 – 8.8		M20 – 8.8		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth [mm]
Option F		M16 – A2-70		M20 – A2-70		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth [mm]
Option E Option C		M16 – 8.8		M20 – 8.8		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth <sup>2</sup> [mm]
Option E Option C		M16 – A2-70		M20 – A2-70		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth <sup>2</sup> [mm]
Option H Option J Option N		M16 – 8.8		M20 – 8.8		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth <sup>2</sup> [mm]
Option H Option J Option N		M16 – A2-70		M20 – A2-70		Screw
		80		180		Screw tightening torque <sup>1</sup> [Nm]
		15		25		Minimum screw-in depth <sup>2</sup> [mm]
Option B*		M16 – 10.9		M20 – 8.8		Screw
		270		330		Screw tightening torque <sup>1</sup> [Nm]
		20		25		Minimum screw-in depth <sup>2</sup> [mm]
Option G*		M16 – 10.9		M20 – 8.8		Screw
		270		330		Screw tightening torque <sup>1</sup> [Nm]
		20		25		Minimum screw-in depth <sup>2</sup> [mm]

\* For protection classes "B" and "C", we recommend for instance a GEOMET® coated screw (thin layer corrosion protection), which must be in strength class 12.9. For the ETH100&125, no GEOMET coated screw is required. (as the bracket is not available in stainless steel).

<sup>1</sup> torque controlled tightening

<sup>2</sup> when screwing into S235 JRG1 grade steel

<sup>3</sup> provide suitable washer under the screw head

<sup>4</sup> Safety factor against slipping is 1.6 in this case. Otherwise, at least 1.8

<sup>5</sup> for power transmission from rod guide to your application please use the dowel pins

**For all mounting options the following applies:**

- ◆ Joint area must be dry and free of grease
- ◆ We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite 242)

**⚠ WARNING**

With mounting option F, H and J, do not mount the cylinder horizontally on one side as in this case the bolted connections are improperly high burdened due to pitching torques and cross forces. In this case always support the cylinder!

With ETH032-080 the mounting thread F\* on the underside of the cylinder can be used as support.

With ETH100&125 the transporting thread (see page 18) can be used as support. For this a screw M12x1.25, quality 8.8 must be used. Furthermore, a minimum screw-in depth of 15 mm must be adhered to. Tighten screw with tightening torque 30 Nm.

**2.1.2.3 Accessory mounting - bearing block**

**Tightening torques for the bearing block to be provided by the customer.**

ETH032	ETH050	ETH080	ETH100	ETH125	
					
0112.039	0122.039	0132.039	0142.039	0152.039	Part number
M8-12.9	M10-12.9	M12-12.9	M16 – 8.8	M20 – 8.8	Screw
37	66	83	200	320	Screw tightening torque (1) [Nm]
15	21	27	20	25	Minimum screw-in depth (2) [mm]

(1) torque controlled tightening

(2) when screwing into S235 JRG1 grade steel

**Boundary conditions:**

- ◆ Provide suitable washer under the screw head
- ◆ Joint area must be dry and free of grease
- ◆ We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite 242)

**2.1.2.4 Mounting the rod guide (option R)**

The rod guide is only available for frame sizes ETH032 ... ETH080!

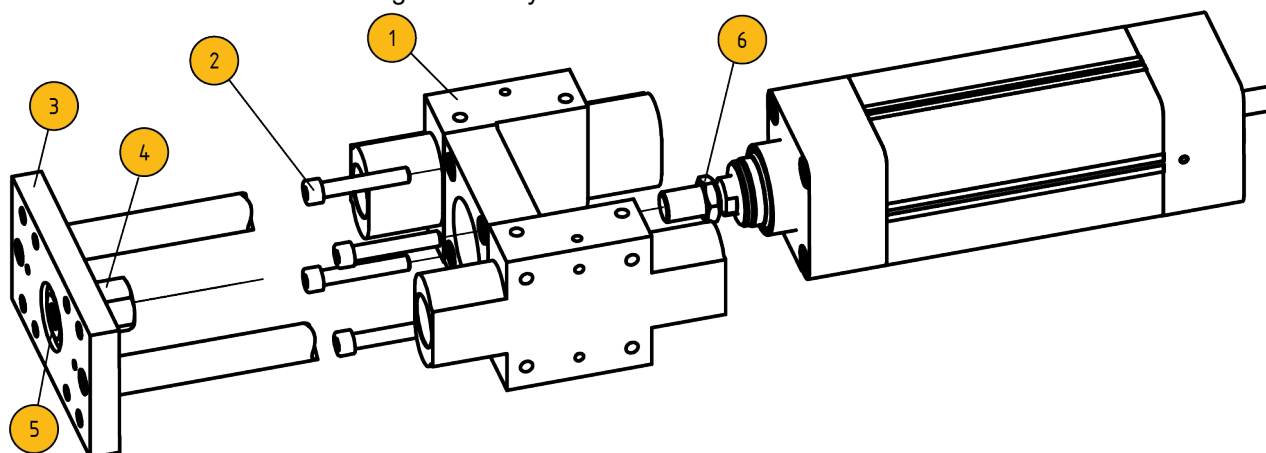


Figure 8: Mounting the rod guide

Place the cylinder on a suitable installation surface.

For the following steps, the piston rod of the cylinder must be retracted.

- ◆ Unwrap the rod guide and remove the transportation lock between the rod guide module ((see Figure 8 Pos.1) and the front plate (see Figure 8 Pos. 3).

**⚠ WARNING**

The rod guide is smooth running and can easily slide out of the rod guide module depending on its position. Hold the rod guide horizontally.

- ◆ Pull out the front plate with the guide rods from the rod guide module and set them aside.
- ◆ Slide the rod guide module (see Figure 8 Pos. 1) onto the centering collar of the ETH cylinder.  
Please note: with the relubrication option in the centre of the profile, the lubrication opening in the profile can be concealed by the guide rods.
- ◆ Screw together the rod guide module with the screws supplied (see Figure 8 Pos. 2) and the required tightening torque. For tightening torques see chapter 2.1.2.2 screw tightening torques for the mounting of the ETH cylinder on the customer's side, option F.
- ◆ Loosen the screw (see Figure 8 Pos. 5) thus the lock nut (see Figure 8 Pos. 4) can move freely.
- ◆ Slide the front panel with the guide rods back into the rod guide module.
- ◆ Turn the lock nut on the piston rod of the ETH cylinder and lock it with the hexagon nut (see Figure 8 Pos. 6).
- ◆ Clamp the lock nut with the front panel by tightening the screw (see Figure 8 Pos. 5) with the required tightening torque. To avoid damaging the cylinder, the lock nut must be used to hold the cylinder in place. Tightening torques: ETH032 = 6,5 Nm, ETH050 = 16 Nm, ETH080 = 29 Nm.

For power transmission from the rod guide module to your application please use dowel pins.

We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite242)

## 2.1.3. Mounting of the payload

### 2.1.3.1 Side Load

Please observe that with ATEX certified ETH cylinders no lateral forces are being applied to the cylinder rod.

Use suitable guiding units, e.g. the rod guiding option R (see in the catalog section following the mounting instructions) or external guiding units.

### 2.1.3.2 Mounting of the payload

**⚠ CAUTION**

The piston rod of the ETH cylinder is equipped with an internal anti-rotation device. When fixing the load on the thrust rod end, do always apply counter pressure on the respective flat, (KV (SW), see ETH catalogue) with an appropriate tool! Otherwise, the internal anti-rotation protection might be damaged.



Figure 9: Mounting of the payload

Connect the payload always with the end of the thrust rod so that occurring lateral forces are minimized. Please observe the admissible lateral forces to the cylinder rod. If the payload is separately guided, even minimal deviations between this guiding system and the cylinder length axis can generate high lateral forces and reduce the service life of the electro cylinder considerably.

**The possibilities to avoid this problem:**

- ◆ Use a flexible coupling at the thrust rod end.  
This coupling can compensate up to 3 mm axial offset and up to 10° angular offset.
- ◆ Use other thrust rod connection elements (accessories), which are able to compensate certain deviations such as rod clevis or spherical rod eye
- ◆ Use a flexible cylinder fixing device (accessories) such as rear clevis or center trunnion.

**⚠ WARNING**

Do only use the rod ends supplied by Parker.  
Only use the nut delivered with the rod end option M as counter screw.  
The connection provided from the customer is always screwed in the thread of option M.

"Cylinder Rod Version": please refer to ETH catalogue  
[http://www.Parker.com/Literature/Electromechanical/Europe/Literature/190\\_550017\\_ETH\\_katalog.pdf](http://www.Parker.com/Literature/Electromechanical/Europe/Literature/190_550017_ETH_katalog.pdf).

### 2.1.3.3 Mounting of force sensors

**NOTICE**

For mounting the force sensor please observe the attached operating instructions respective for the force sensors!

**⚠ DANGER**

In ETH ATEX cylinders only certified force sensors must be used:

- ◆ Area 1 (Category 2G)
- ◆ Explosive range IIB resp. IIC.
- ◆ Temperature class 4.

For the ETH ATEX cylinder only use the force sensors of the catalogue which are ATEX certified.

## 2.2 Electrical installation

### 2.2.1. Direction of the motor during extension of the cylinder

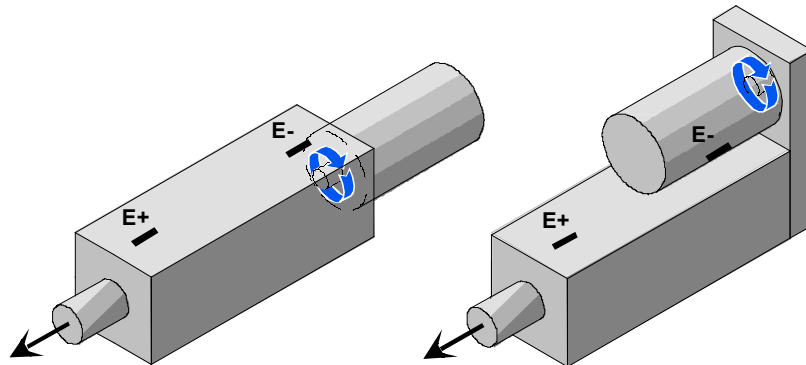


Figure 10: Turning direction of the motor during extension of the cylinder

#### NOTICE

With parallel drive (see Figure 10) of proximity switchc), the turning direction of the motor is reversed in comparison with the direct drive configuration!

### 2.2.2. Sensors

All electro cylinders feature a permanent magnet in the spindle nut. It activates the sensors which are mounted in the special mounting grooves on one side of the cylinder.

#### NOTICE

Depending on the design of the proximity switches, the proximity switches protrude up to 1 mm from the mounting groove of the cylinder.

Proximity switches and limit switches: please refer to im ETH Catalogue [http://solutions.parker.com/eth\\_support](http://solutions.parker.com/eth_support).



#### DANGER

In ETH ATEX cylinders only certified sensors must be used:

- ◆ Area 1 (Category 2G)
- ◆ Explosive range IIB resp. IIC.
- ◆ Temperature class 4.

For the ETH ATEX cylinder only use the NAMUR limit switches of the catalogue which are ATEX certified.

#### 2.2.2.1 Mounting of proximity switches

- ◆ Proximity switches can be inserted into all grooves on the ETH electro cylinder.
- ◆ If no sensors are mounted by the manufacturer (on customer request), please remove the groove protection covers. Use a sharp screwdriver to lever the ends of the covers off the grooves. Pull the entire covers out manually.
- ◆ Install the sensors. The proximity switches can be inserted into the grooves from above. The cable ends should lead into the motor direction. Push the proximity switches to their approximate positions in the grooves of the cylinder body. Tighten the fixing screws on the proximity switches slightly.
- ◆ If limit switches are used as end limits (see page 31) or are pre-assembled at the factory (at customer request), do set them.
- ◆ You can use the formerly removed protective covers in order to fix the sensor cables. Please cut the covers to the desired length. A pair of scissors may be used. At the point where the cables are led out, shorten the respective tape 5 to 10 mm additionally (see Figure 12).
- ◆ Insert the cables into the grooves of the plastic covers and push the cover into the groove together with the cable.
- ◆ Please observe the Operating Instructions of the manufacturer when commissioning the sensors.
- ◆ Connect the proximity switches to the controller.

### Proximity switches mounting example: 2 end limits with machine zero

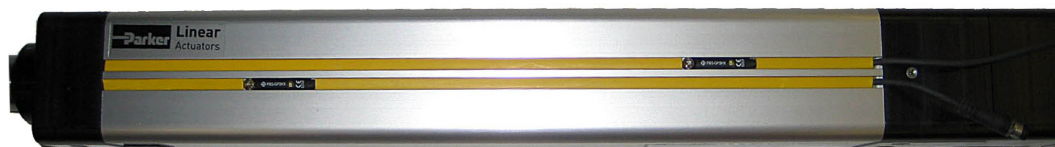


Figure 11: Grooves for proximity switches

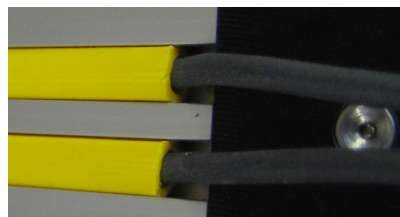


Figure 12: Grooves for proximity switches, details

### 2.2.3. Setting the end limits

#### **⚠ WARNING**

The steps described below can be best executed with energized drive. Therefore, they may only be performed by trained and authorized personnel.

Do only travel at very low speed (<10 mm/s) and reduce the drive torque to a minimum.

Ensure that there are no persons in the hazardous area.

#### The setting of the end limits depends on the application.

#### **NOTICE**

No proximity switch is to be mounted in the area of the central lubrication port (option).

The following activation positions at the mechanical end limits result from the initiators recommended in the catalog.

The given positions "A" and "B" are estimated recommendations and may vary.

The final adjustment of the initiator position, even in the case of initiators mounted at the factory (on customer request), must be checked and corrected if necessary during commissioning.

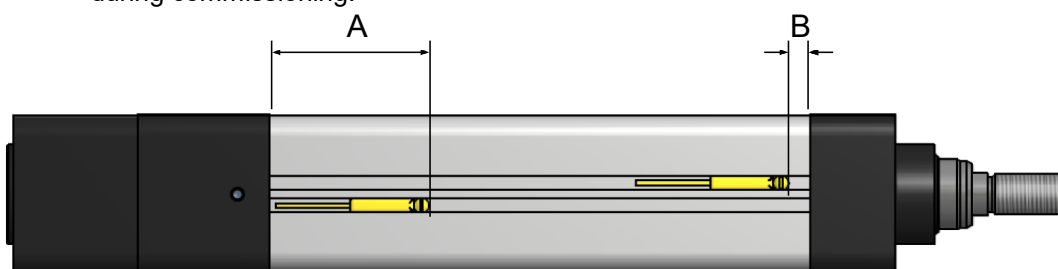


Figure 13: Position of sensors at the mechanical limits

#### Position of sensors at the mechanical limits

ETH	Pitch	A [mm]	B [mm]
032	M05	68	0
	M10	77	0
	M16	81	0
050	M05	71	0
	M10	77	0
	M20	89	0
080	M05	85	0
	M10	103	0
	M32	133	0
100	M10	162	0
	M20	200	0
125	M10	186	6
	M20	274	6

**⚠ CAUTION**

Please add the respective safety travels to the mentioned values!  
Stroke, Usable Stroke and Safety Travel: see ETH catalogue .

**Adjusting the machine reference initiator**


The correct position for the home switch (machine zero switch) depends on the application.

It is recommended to set the machine zero at or near the end of the travel. This saves time, as it minimizes the chance that the machine zero is searched for in the wrong direction. In some cases it is possible to use one of the limit switches as machine zero. This method provides however a reduced precision, as the resulting position can normally not be and-linked with the encoder index pulse.

## 2.3 Motor/ gear assembly

**Notes on motor wiring****⚠ DANGER**

Improper wiring may lead to severe injuries or death.  
A wiring must always be made from a skilled electrician.  
Before carrying out any installation work de-energize the motor.  
Observe the safety instructions in the operating instructions of the motor used.

**⚠ WARNING**

The internal ballscrew is not self-locking!  
Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

In case of non respect severe injuries may occur.

**⚠ DANGER****Grounding instructions**

Electrostatic charge of the cylinder may lead to sparks and cause danger of explosion in explosion protection zones. Avoid electrostatic charge.  
The cylinder must be grounded and be a part of the grounding concept. Ground cylinder via the motor and the cylinder mounting (machine frame).  
In case the motor / gear assembly is provided by the customer, please make sure that there is a conductive connection (transition resistance < 1 MOhm) between cylinder and motor housing.

**In this chapter you can read about:**

Motor / gear assembly with inline motor configuration .....	33
Motor / gearbox mounting with parallel motor configuration .....	35
IP65 motor mount .....	42

### 2.3.1. Motor / gear assembly with inline motor configuration

ETH032 ... ETH080

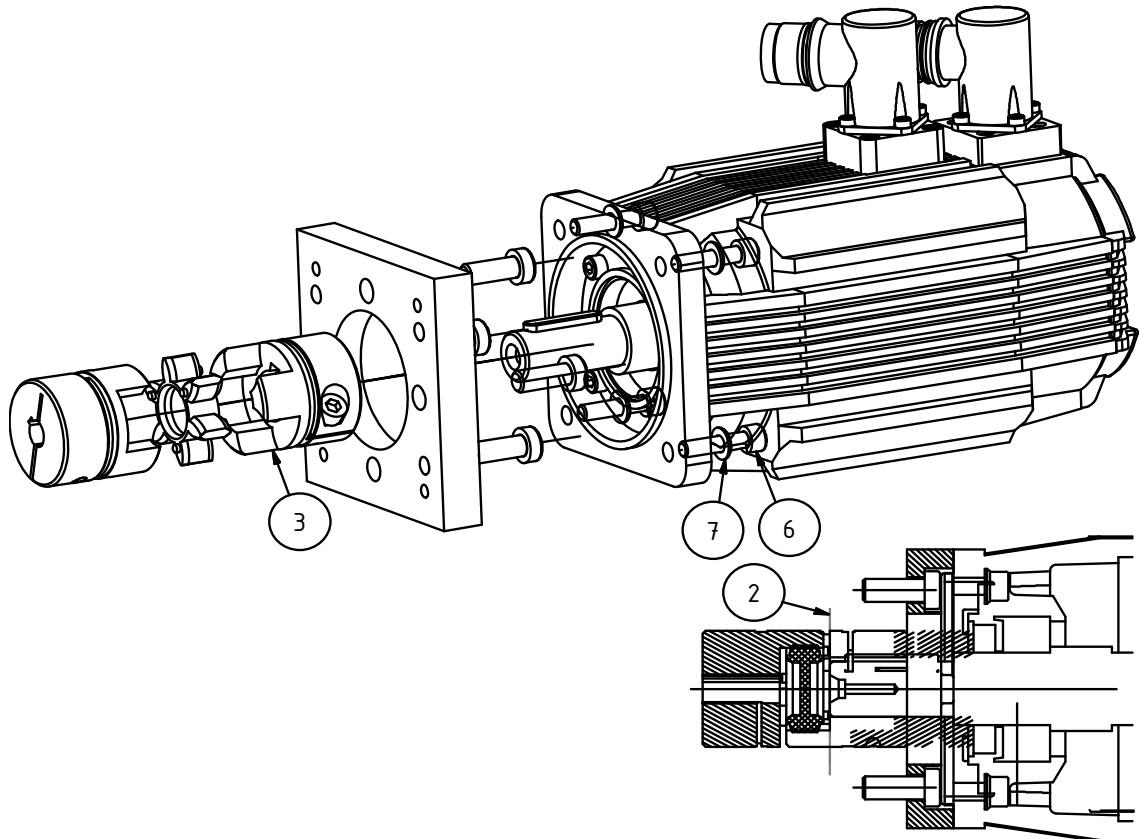


Figure 14: Motor /gear assembly ETH032 ... ETH080 inline

ETH100&125

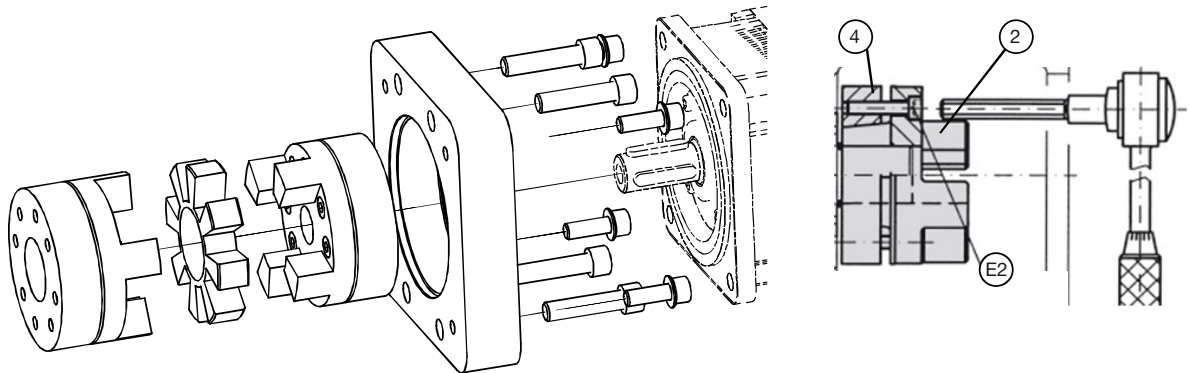


Figure 15: Motor /gear assembly ETH100 ... ETH125 inline

#### Dismantle motor / gearbox

- ◆ Remove motor connector.
- ◆ If you use a gearbox, we recommend to dismantle the motor from the gearbox first for reasons of weight.
- ◆ Loosen screws (see Figure 14 Pos. 6).
- ◆ Remove motor / gearbox including mounted coupling half with caution.

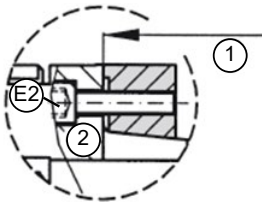


Figure 16: Coupling fixed stop ETH100 & 125

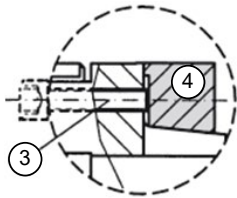


Figure 17: Clamp collar ETH100 & 125

- ◆ Loosen clamping screw of the coupling half on the motor/ gear shaft:
  - ◆ ETH032, ETH050, ETH080:
    - Loosen radial clamping screw of the coupling half (see Figure 14 Pos. 3).
  - ◆ ETH100&125:
    - Loosen all clamping screws (see Figure 15 & Figure 16 pos. E2) carefully (approx. 3 mm) and screw two of the screws into the open threaded holes. Now tighten screws evenly until the clamp collar (please refer to Figure 17 Pos. 4) is released from the coupling hub (please refer to Figure 16 Pos. 2) and can be freely moved.
- ◆ Remove coupling half from the motor / gear shaft.

### Motor / gear assembly

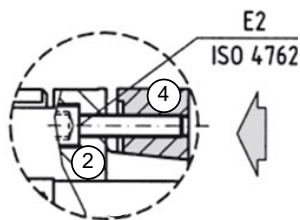


Figure 18: Coupling fixed stop gap ETH100 & 125

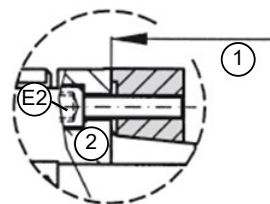


Figure 19: Coupling fixed stop 2 ETH100 & 125

- ◆ Loosen clamping screws of coupling halves for the motor/ gear shaft.
  - ETH100&125: Clamp collar (see Figure 18 Pos.4) and clutch hub (see Figure 18 Pos. 2) must be loosened.
- ◆ Slip the coupling half onto the motor / gearbox shaft and align to be flush with the shaft if not stated otherwise by Parker (see Figure 18 Pos. 2).

### ATTENTION!

Shafts and bores of the hubs must be free of burrs, dirt and grease.

- ◆ ETH032, ETH050, ETH080:
  - tighten radial clamping screw with tightening torque (see Table 1).
- ◆ ETH100&125:
  - Tighten the fixing screws (please refer to Figure 18 Pos. E2) crosswise with a torque wrench in 3 turns with 1/3, 2/3 and full tightening torque (please refer to Table 1) until the final tightening torque is attained and the clamp collar touches the coupling half. The dead stop (please refer to Figure 19 Pos. 1) on the coupling half (please refer to Figure 19 Pos. 2) prevents too high pretension of the conical clamp collar and ensures high rotational accuracy.
- ◆ The second coupling half and the elastomer ring of the coupling are mounted on the ETH cylinder at the factory. If not, fit the elastomer ring onto one of the coupling halves.

Joining with the Elastomer crown requires an axial mounting force. This force can be reduced by cleaning and lightly greasing the spider element and the contact surfaces.

### ATTENTION!

Oils and greases containing molybdenum disulfide or other high pressure additives as well as sliding grease paste may not be used.

- ◆ Place motor/gearbox on the mounted flange, so that the coupling halves intermesh.

## ⚠ CAUTION

Secure motor/gearbox against dropping.  
Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Equip screw with washer and tighten (please refer to Figure 14 Pos. 6, Pos. 7).

**Tightening torques for motor/gearbox assembly \***

ETH	Coupling size/model	Tightening torque
032	GS12 (outer diameter: 25 mm)	1.4 Nm
050	GS14 (Outer diameter: 30 mm)	1.4 Nm
080	GS19 (Outer diameter: 40 mm)	10.5 Nm
100	EK6-300, screws ISO4762 M6	12 Nm
125	EK6-450, screws ISO4762 M8	35 Nm

*Table 1: Tightening torques for motor/gearbox assembly*

\* All clamping screws of the coupling halves must be secured (medium strength) by a screw lock.

## 2.3.2. Motor / gearbox mounting with parallel motor configuration



### In this chapter you can read about:

Parallel mounting ETH032 ... ETH080 standard.....	35
Parallel mounting ETH032 ... ETH080 with Ex - Motor .....	37
Parallel mount ETH100: .....	39
Re-apply toothed belt pre-tension .....	41
Resetting the toothed belt pre-tension .....	41

## NOTICE

With parallel motor configuration, increased running noises are possible due to the belt until it has run in.

### 2.3.2.1 Parallel mounting ETH032 ... ETH080 standard

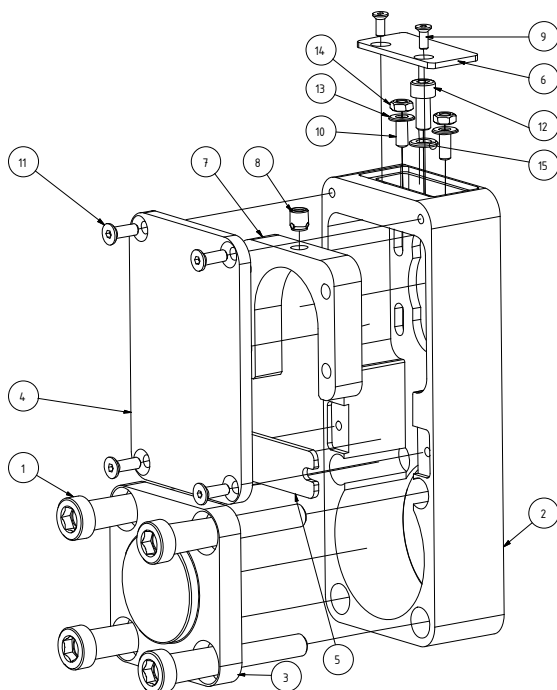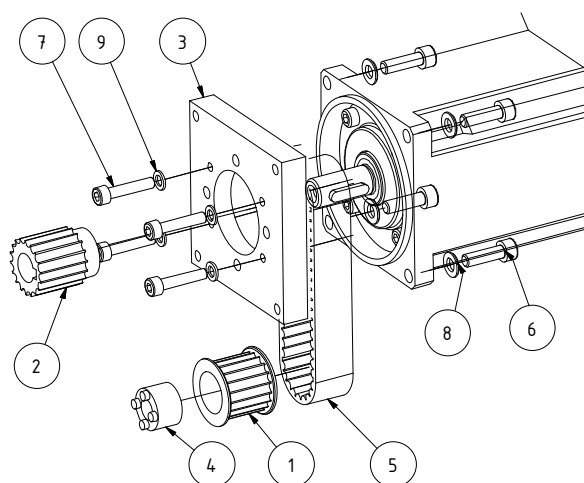*Figure 20: Parallel housing**Figure 21: Motor mounting option*

Motor mounting option (not valid for mounting Parker EX motors)

### Motor / gear dismantling ETH032 ... ETH080 (not valid for all motor mounting options)

- ◆ Remove connectors from motor.

#### **WARNING**

The internal ballscrew is not self-locking! Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

- ◆ Dismantle lid (please refer to Figure 20 Pos.6 und Pos.4).

**ATTENTION!** Keep all screws and lids for later mounting.

- ◆ Release toothed belt tension:

- ◆ Slightly loosen 4 screws (please refer to Figure 22 Pos.7), by 1 to 2 turns (for detailed view, please refer to Figure 20 and Figure 21.

**ATTENTION!** Do not remove the screws entirely!

- ◆ Loosen tightening screw (please refer to Figure 20 Pos.12) until the drive unit is not lowered any further.

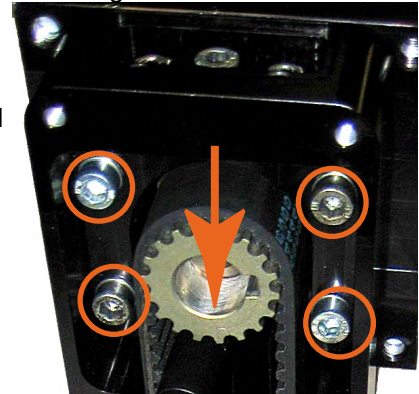


Figure 22: Release toothed belt tension

- ◆ Remove 4 screws completely (please refer to Figure 21 Pos. 7). First at the bottom, then at the top.

#### **CAUTION**

Make sure not to insert your fingers between motor / gearbox and electro cylinder!

We recommend to place a support pad between motor and cylinder profile.

- ◆ Remove drive unit with mounted toothed pulley from the parallel housing with caution.

**ATTENTION!** Make sure that the toothed belt is not stuck in the parallel housing.

- ◆ Dismantle motor / gearbox flange (please refer to Figure 21 Pos.3) by loosening the screws (please refer to Figure 21 Pos.6).

- ◆ Measure and note depth "A" from toothed pulley to motor / gearbox shaft before dismantling the toothed pulley (please refer to Figure 23A).

- ◆ Remove threaded pin(s) from the toothed pulley.
- ◆ Pull off toothed pulley with the aid of a pull-off tool.

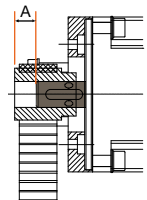


Figure 23:  
Depth gauge  
A

### Motor / gearbox mounting (ETH032 ... ETH080) (not valid for mounting Parker EX motors)

- ◆ Fit toothed pulley and set dimension "A". (please refer to Figure 23. Dimension "A" is provided by Parker. If the drive was exchanged, please set the dimension "A" noted before.

- ◆ Screw in the toothed pulley threaded pin(s) and secure (medium strength) by screw lock.

- ◆ Mount motor / gearbox flange (please refer to Figure 21 Pos.3) with the screws (please refer to Figure 21 Pos.6 & Pos.8).

- ◆ Insert drive unit with mounted toothed pulley into the parallel housing with caution. We recommend to place a support pad between motor and cylinder profile.

**ATTENTION!** Please make sure that the toothed belt is correctly geared in the pulley toothing.

- ◆ Screw in 4 screws (please refer to Figure 21 Pos.7) until the motor flange fits. Do not yet tighten.

**⚠ CAUTION**

Make sure not to insert your fingers between motor / gearbox and electro cylinder!

We recommend to place a support pad between motor and cylinder profile.

- ◆ Setting the toothed belt pretension:
  - ◆ For the same toothed belt (see page 41).
  - ◆ For a new toothed belt (see page 41)
- ◆ Mount lid (please refer to Figure 20 Pos.6 and Pos. 4).

### 2.3.2.2 Parallel mounting ETH032 ... ETH080 with Ex - Motor

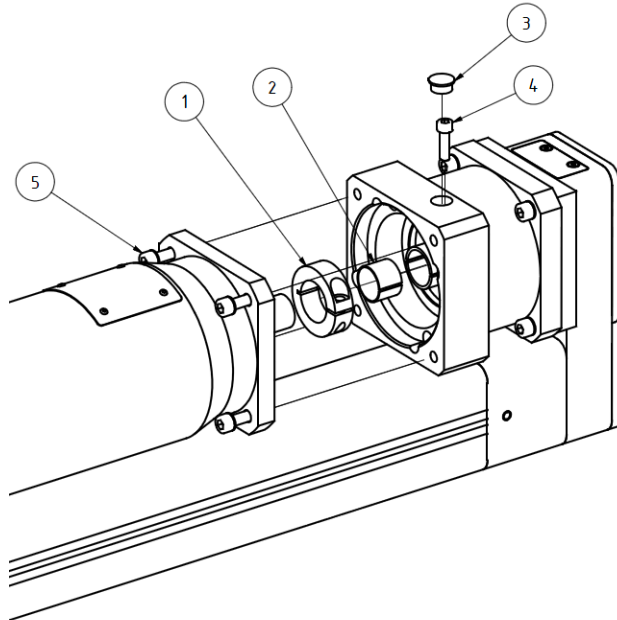


Figure 24: Disassembly of an Ex-Motors

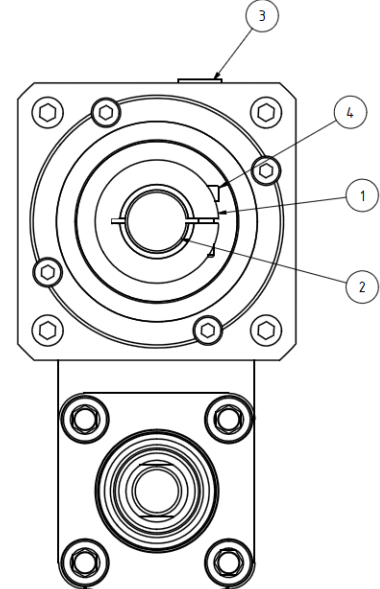


Figure 25: Flange view: Disassembly of a EX motor

#### Dismantle EX-motor ETH032 ... ETH080

The ETH032, 050 and 080 Electro cylinders for parallel mounting of the EX motor (ETH032 motor flange option K1B, ETH050 motor flange option K1D, ETH080 motor flange option K1J) are furnished with tensioned belt. When dismantling the motor, the belt must NOT be detensioned.

- ◆ Remove connectors from motor

**⚠ WARNING**

The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor/gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Remove cover plate (please refer to Figure 24 Pos. 3) and loosen clamp screws (please refer to Figure 24 Pos. 4)
- ◆ Loosen motor fixing screws (please refer to Figure 24 Pos. 5)
- ◆ Remove motor from the hollow shaft. ATTENTION! Secure motor against dropping!

### Mounting the EX-motor (ETH032... ETH080)

The ETH032, 050 and 080 Electro cylinders for parallel mounting of the EX motor (ETH032 motor flange option K1B, ETH050 motor flange option K1D, ETH080 motor flange option K1J) are furnished with tensioned belt. When dismantling the motor, the belt must NOT be detensioned.

- ◆ Clean contact surfaces of motor, motor shaft, motor flange, hollow shaft bore, clamping ring (please refer to Figure 24 Pos. 1)) and spacer sleeve (please refer to Figure 24 Pos. 2).
- ◆ Push the spacer sleeve (please refer to Figure 24 Pos. 2) in the hollow shaft bore up to its stop.
- ◆ Put the clamping ring (please refer to Figure 24 Pos. 1) onto the hollow shaft and shift it up to the stop.
- ◆ Align the slot of the clamping ring (please refer to Figure 24 Pos. 1) and the spacer sleeve (please refer to Figure 25 Pos. 2) to the slot of the hollow shaft.
- ◆ Align the hollow shaft so that the clamping screw (please refer to Figure 25 Pos. 4) stands over the opening of the flange. 4).
- ◆ Place cylinder upright, with the hollow shaft bore on top.
- ◆ Push the motor vertically, with the motor shaft down, into the hollow shaft up to the stop. Please take care that the motor connectors are on the right side.

## NOTICE

For the next steps, leave ETH cylinder and motor in this position.

- ◆ Insert and tighten motor fixing screws slightly (please refer to Figure 24 Pos. 5).
- ◆ Insert and tighten clamping screws slightly (please refer to Figure 24 Pos. 4).
- ◆ Tighten motor fixing screws.
- ◆ Tighten clamping screw (please refer to Figure 24 Pos. 4) with the respective tightening torque.
- ◆ Close the opening in the motor flange with the lid (please refer to Figure 24 Pos. 3)

#### Tightening torques clamping screw:

	Clamping screw	Tightening torque
<b>ETH032</b>	M4x16	3.5 Nm
<b>ETH050</b>	M5x20	7.2 Nm
<b>ETH080</b>	M6x26	11.8 Nm

### 2.3.2.3 Parallel mount ETH100:

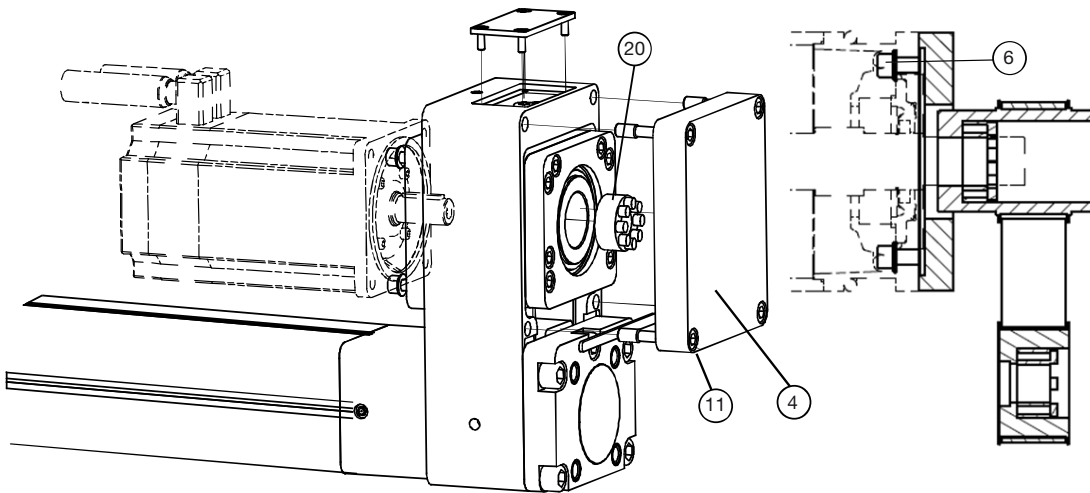


Figure 26: ETH1xx: Motor/ gear assembly parallel

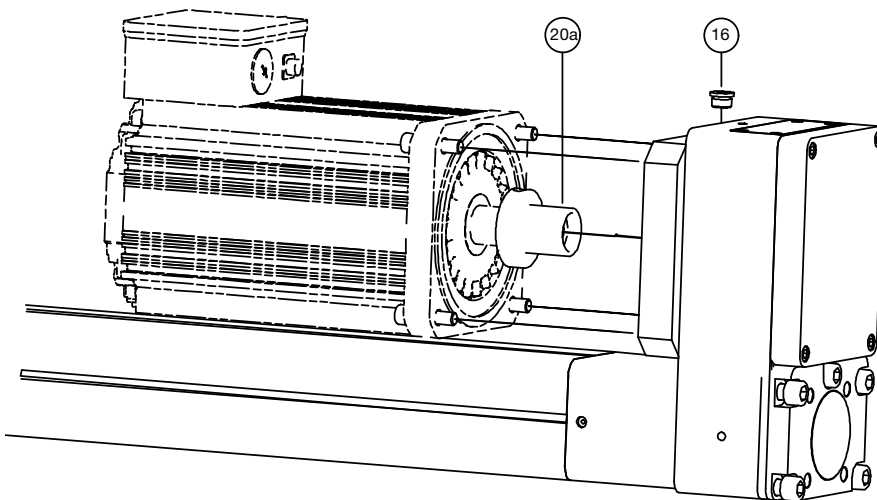


Figure 27: ETH1xx: Motor/ gear assembly parallel with K1M option

#### Motor / gearbox disassembly (ETH100&125)

The ETH100&125 electro cylinder is furnished with tensioned belt. When dismantling the gearbox / motor, the belt must NOT be detensioned.

- ◆ Remove connectors from motor

#### **⚠ WARNING**

The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor/gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Dismantle lid (please refer to Figure 26 Pos.4) and screws (please refer to Figure 27 Pos.11).
- ◆ Loosen all tensioning screws of the clamping bushing (see Figure 26 Pos. 20) (approx. 3 mm).  
with K1M drive option: loosen tensioning element (please refer to Figure 27 Pos.20a) via flange sided mounting hole. For this, first loosen the lock screw (please refer to Figure 27 Pos. 16) and then the adjusting screw of the tensioning element.
- ◆ Loosen motor fixing screws (please refer to Figure 26 Pos.6).

- ◆ The clamping unit should (after loosening the tensioning screws) be loose. If not, knock slightly on the loosened screws with a hammer in order to push back the rear taper ring (not with K1M drive option).
  - ◆ Remove motor / gearbox from the hollow shaft.
- ATTENTION!** Secure motor/gearbox against dropping!
- ◆ Remove clamping unit (please refer to Figure 26 Pos.20a & Figure 27 Pos 20a).

### Motor / gearbox mounting (ETH100&125)

The ETH100&125 electro cylinder is furnished with tensioned belt.

When mounting the gearbox / motor, the belt must NOT be detensioned or retensioned.

- ◆ Dismantle lid (please refer to Figure 26 Pos.4) and screws (please refer to Figure 26 Pos.11).
- ◆ Loosen all tensioning screws of the clamping bushing (see Figure 26 Pos. 20) (approx. 3mm) and remove them from the hollow shaft.  
With K1M drive option: loosen tensioning element (please refer to Figure 27 Pos.20a) via flange sided mounting hole, do not remove tension unit. For this, first loosen the lock screw (please refer to Figure 27 Pos. 16) and then the adjusting screw of the tensioning element.
- ◆ Clean contact surfaces of motor / gearbox shaft and hollow shaft bore.  
Shaft and bores must be free of burrs, dirt and grease.
- ◆ Insert motor / gearbox into hollow shaft.  
with K1M drive option: insert tensioning element ((please refer to Figure 27 Pos.20) in the hollow shaft on the motor side and push up to the exterior stop. Adjust tensioning element so that the adjusting screw can be tightened via flange sided mounting holes.

### WARNING

The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor/gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Insert and tighten motor fixing screws slightly.
- ◆ Insert tension bushing (please refer to Figure 26 Pos.20) into hollow shaft and slide it up to the inner stop (not with K1M drive option).
- ◆ Tighten screws crosswise until the inner ring touches the shaft and the outer ring touches the hub (not with K1M drive option).
- ◆ Tighten motor fixing screws.
- ◆ Afterwards tighten tensioning screws of the clamping bushing (please refer to Figure 26 Pos.20, please refer to Figure 27 Pos.20a) crosswise step by step (in three turns with 1/3, 2/3 and full tightening torque), until the screw tightening torque (please refer to Table 2) is reached.  
You can apply counter pressure with the aid of a hook wrench, which can be inserted into the bores on the toothed pulley.
- ◆ Mount lid (please refer to Figure 26 Pos.4) and screws (please refer to Figure 26 Pos.11).

### Tightening torque of motor flange/clamping bushing

	Motor flange option	Screw tightening torques Clamping bushing (Pos. 20)
<b>ETH100</b>	K1H, K1J, K1K, K1L, P1C, P1D, P1J	Hexagon socket SW: 5 mm M6, 15 Nm
<b>ETH125</b>	K1L, P1C, P1D, P1K	Hexagon socket SW: 5 mm M6, 15 Nm
	K1M	Hexagon socket SW: 8 mm M16, 21 Nm

Table 2: Tightening torques for motor flange / clamping sleeve

### 2.3.2.4 Re-apply toothed belt pre-tension

#### ETH032 ... ETH080

If the motor / gearbox is exchanged and the toothed belt is still in good condition, the pre-tension can be reset without measuring device.

- ◆ Remove the upper cover, please refer to Figure 20 Pos 6
  - ◆ First check whether the toothed belt with its toothings is located in the upper and lower pulley.
  - ◆ The screws (please refer to Figure 28 Pos.7) must be screwed in without torque so that the drive unit can be lifted upwards
 

**Recommendation:** Screw in the screws completely and then loosen again about half a turn.
  - ◆ Tighten central toothed belt tensioning screw (please refer to Figure 20 Pos.12).  
The drive unit must lift when tightening the screw. Lift the unit until it touches the 2 internal stops (please refer to Figure 20 Pos. 10). This is made by tightening the central tightening screw.

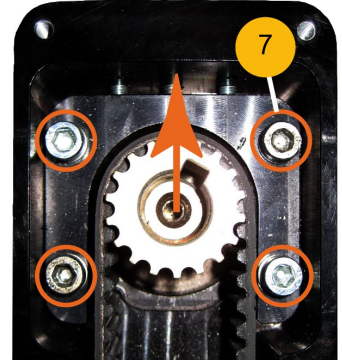


Figure 28: Screws for fixation of drive unit ETH032...ETH080

- ◆ Tighten 4 screws (please refer to Figure 28 Pos.7) with the given tightening torque (please refer to Table 3).
- ◆ Refix both lids (please refer to Figure 20 Pos.4 & 6) with the respective screws (please refer to Figure 20 Pos.11 & 9).

#### ETH100&125

The ETH100&125 electro cylinder is furnished with tensioned belt. When dismantling the gearbox / motor, the belt must **NOT** be detensioned. Therefore, this chapter is usually not valid for the ETH100&125.

#### Screw tightening torques belt tensioning option

ETH032	ETH050	ETH080	ETH100	ETH125
3 Nm	5 Nm	20 Nm	70 Nm	115 Nm

Table 3: Screw tightening torques belt tensioning option

### 2.3.2.5 Resetting the toothed belt pre-tension

After installing a new toothed belt, the toothed belt pre-tension must be readjusted.

- ◆ Make sure that the screws
  - ETH032...ETH080: see Figure 28, Pos 7
  - ETH100 & ETH125; see Figure 29, Pos7 are provided with a medium strength screw lock (e.g. type Wiko 02K43) and are fully screwed in. Only screw in screws without torque: Recommendation: Screw in the screws completely and then loosen again about half a turn.
- ◆ ETH032...ETH080: For this sizes, the motor/ gearbox is already mounted.
- ◆ ETH100 & ETH125: For this sizes, the motor/ gearbox can be installed after belt tensioning. Furthermore, it must be take care the the lower bearing cover is already mounted (see Figure 39 Pos 3, screws Pos 1 with medium strength screw locking, eg type Wiko 02K43).
- ◆ Check, if the belt toothings is geared into the upper and lower toothed pulley.
- ◆ The screws (please refer to Figure 28 Pos.7 ETH100&125; see Figure 29, Pos7) must be screwed in without torque, so that the drive unit can be lifted upwards.

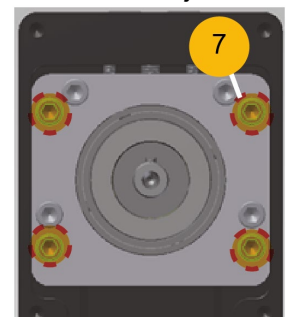


Figure 29: Screws for fixation of drive unit ETH100 & ETH125

- ◆ Loosen both lock nuts (please refer to Figure 20 Pos.14; ETH100&125) (do not remove entirely).
- ◆ Unscrew both threaded pins (please refer to Figure 20 Pos.10; ETH100&125) until they are almost level with the inside of the parallel housing.
- ◆ Tighten central toothed belt tensioning screw (please refer to Figure 20 Pos.12) until the toothed belt is noticeably pretensioned.
- ◆ Measure toothed belt tension with a suitable device.  
We recommend: Gates: "Sonic 507c" or Hilger&Kern: "Trummeter"
- ◆ Tighten tension screw slightly and measure again.  
Repeat this procedure until the required toothed belt pretension (see page 50) is set.

## ⚠ CAUTION

Only a correctly set toothed belt pretension ensures fail-safe operation of the cylinder.

- ◆ Screw in both threaded pins (please refer to Figure 20 Pos.10) until they touch the inner bracket. Tighten pins slightly.
- ◆ ETH100 & ETH125 Motor/gearing installation: Now the motor/ gearbox (see page 39) must be installed. In this case, the screws, Figure 29, Pos7 still have to be loosened easily. After the motor/gear assembly and before the gradual final tightening of the clamping bushing (see Figure 26Pos 20; Figure 27Pos 20a) the four screws, see Figure 29 Pos7, must be fully tightened (screw tightening torques see Table 3).
- ◆ ETH032...ETH080: Completely tighten the four screws (please refer to Figure 28 Pos.7. screw tightening torques and Table 3.)
- ◆ Reassemble the vocer  
ETH032...ETH080: please see Figure 20 Pos 4 & 6 with screws Pos 11 & 9  
ETH100 & ETH125: please see Figure 39 Pos 4 & 6 screws Pos 11 & 9.

### 2.3.3. IP65 motor mount

For the IP65 option, we generally recommend to have the motor mounted by Parker. If the motor is not mounted by Parker, please respect the following instructions to achieve the best possible sealing effect.

## NOTICE

Before you start installing the motor with IP65, first read the corresponding chapter in motor / gearbox assembly (see page 32) and observe the safety and installation instructions.

#### 2.3.3.1 Motor mounting for IP65 inline

The cylinder is furnished with mounted coupling housing and motor flange. Before mounting the motor to the flange, it must be sealed as follows.

- ◆ Apply silicone sealing compound to the motor flange pilot (e.g. Sista Silicone F109 Universal).
- ◆ Screw motor to motor flange  
(see chapter "Motor and gear assembly"  
(see page 32)).
- ◆ Note the additional mounting steps  
(see chapter "Motor and gear assembly"  
(see page 32)).

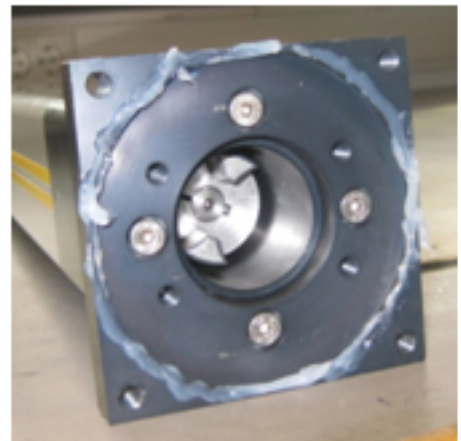


Figure 30: Flange prepared for IP65

### 2.3.3.2 IP65 motor mount parallel

The cylinder is furnished with mounted parallel housing. The housing as well as the motor flange which is fixed to the housing, must be sealed.

#### ETH032...080:

- ◆ Mounting the toothed pulley (enclosed) on the motor shaft; see chapter motor/ gear assembly eth032...080 (see page 32).
- ◆ Apply silicone sealing compound to the motor flange pilot (e.g. Sista Silicone F109 Universal).
- ◆ Screw motor to motor flange (enclosed) see chapter Motor/ gear assembly ETH032...080 (see page 32).
- ◆ Apply silicone sealing compound around bores of the parallel housing
- ◆ Mount motor with motor flange to parallel housing; see chapter Motor/ gear assembly ETH032...080 (see page 32).
- ◆ Tension toothed belt; see chapter re-apply toothed belt tension or readjust toothed belt tension .
- ◆ Place seal (furnished with the cylinder).
- ◆ Place lid (furnished with the cylinder).
- ◆ Fix lid and seal to parallel housing

#### ETH100&125:

- ◆ ETH100&125 are delivered with motor flange mounted and belt tensioned. There is a paper seal between motor flange and parallel housing, no need to seal with silicone
- ◆ Remove clamping bush (enclosed) from the hollow shaft; see chapter Motor/ gear assembly ETH100&125 (see page 39).
- ◆ Apply silicone sealing compound to the motor flange pilot (e.g. Sista Silicone F109 Universal).
- ◆ Mount the motor on the parallel housing and tighten the clamping bush; see chapter Motor/ gear assembly ETH100&125 (see page 39).
- ◆ Place seal (furnished with the cylinder).
- ◆ Place lid (furnished with the cylinder).
- ◆ Fix lid and seal to parallel housing

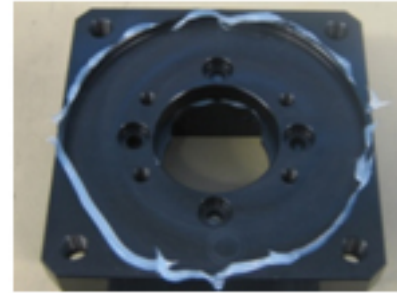


Figure 31: Flange prepared for IP65



Figure 32: Parallel housing ETH32...80 prepared for IP65

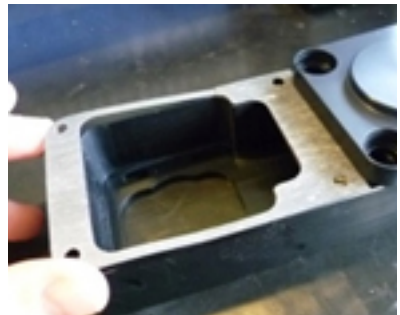


Figure 33: Place seal



Figure 34: Place lid



# 3. Maintenance and service

## In this chapter you can read about:

Maintenance schedule .....	44
Lubricating intervals and amount of lubricant for ATEX ETH- Electro Cylinder .....	45
Toothed belt .....	47
Belt / belt tensions .....	50

## NOTICE

Before maintenance and servicing, please read the chapter Safety instructions!

Before maintenance work, disconnect the drives concerned or the entire system from the power supply and secure them against being switched on again with a padlock. If the unit needs to be operable for specific repair works, you have to be especially cautious. Please make sure that there are no persons in the hazardous area - if needs be, secure this area by additional enclosures or barriers against access.

## DANGER

If set-up, repair or maintenance works require that safety installations be dismantled, these must be reinstalled immediately after the respective works have been completed. The unit must be shut down before any of the safety installations are dismantled.

## CAUTION

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.

### Maintenance measures ETH

The ballscrew drive must be relubricated within given intervals.

The lubrication intervals depend on the operating conditions (nominal size, pitch, speed, acceleration, loads, etc.) and the ambient conditions (e.g. temperature). Ambient influences such as high loads, impacts and vibrations shorten the lubrication intervals.

In short-stroke applications, a lubrication run must be performed after max. 10 000 movement cycles.

In the event of small loads and if the application is impact and vibration free, the lubrication intervals can be increased. Under normal operating conditions, the given lubrication intervals apply. If the total travel per year is shorter than the given intervals, **the cylinder must be relubricated at least once per year.**

## 3.1 Maintenance schedule

WHEN	WHAT	ACTION
After commissioning	Spindle	The cylinder is furnished completely lubricated. If the cylinder was held on stock at your premises for more than 1 year, it must be relubricated before commissioning. see lubricating intervals and amount of lubricant
After reaching the lubrication interval or at least once a year	Spindle	Relubricating the spindle and visual inspection for external damages of the actuator. See lubricating intervals and amount of lubricant
Annually	Electro Cylinder	Visual inspection for external damages of the actuator. If externally caused damages are visible on the thrust rod or on the profile, please contact Parker.
Annually	Fixings provided by the customer	Check screw tightening torque. see mounting tightening torques ETH (see page 25)
Annually, or every 6000 hours of operation	Toothed belt (with parallel configuration)	In general, the high performance toothed belts used in the ETH are maintenance free. Visual inspection of the timing belt is however required. Please check the toothed belt for the following aspects: ◆ Wear at the teeth ◆ Cracks in the tooth root surface ◆ Fractures in the belt back If you find signs of wear, the toothed belt must be exchanged (see page 48).

## 3.2 Lubricating intervals and amount of lubricant for ATEX ETH- Electro Cylinder

	Spindle	Interval	Amount of lubricant
ETH032	M05	80 km	1.3 cm <sup>3</sup>
	M10	160 km	1.6 cm <sup>3</sup>
ETH050	M05	80 km	1.6 cm <sup>3</sup>
	M10	160 km	1.9 cm <sup>3</sup>
ETH080	M05	80 km	3.1 cm <sup>3</sup>
	M10	160 km	4.4 cm <sup>3</sup>
ETH100	M10	80 km	14 cm <sup>3</sup>
	M20	160 km	17 cm <sup>3</sup>
ETH125	M10	60 km	20 cm <sup>3</sup>
	M20	120 km	48 cm <sup>3</sup>

### Lubricant



**Do only use "Klüber NBU15" lubricating grease for standard cylinders!**

For applications in food related areas, "Klübersynth UH1 64-62" grease is used (customized version).

### Grease gun

To relubricate the ball screw drive, use a grease gun suitable for the grease nipple. We recommend a one-hand lubrication press with nozzle attachment type D1a4 (DIN3405). Both are optionally available:

nozzle attachment type D1a4 (DIN3405) - part No.: 180-006043

One-hand lubrication press with nozzle attachment type D1a4 (DIN3405) - part No.: 180-006072

### 3.2.1. Relubrication via central lubrication port (standard)

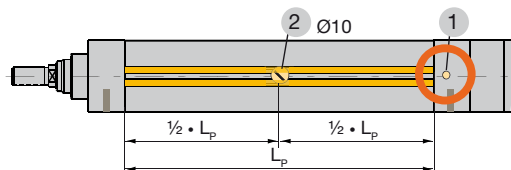


Figure 35: Relubrication via central lubrication port (standard)

1: Central lubrication (standard)

2: Central lubrication (Option)

Make sure that all external stops are removed.

Repeat the following process three times:

- ◆ Retreat Electro Cylinder completely so that it touches the rear stop.
- ◆ Move the cylinder by 0.5 mm into the internal buffer.

### CAUTION

Ensure by means of control/controller that the internal buffer is not passed by more than 0.5 mm!

- ◆ This is the lubricating position.
- ◆ Place the pipe orthogonally onto the lubricating nipple and press.
- ◆ Use 1/3 of the defined amount of lubricant.

### NOTICE

The amount of lubricant applied can be defined by the number of pump strokes. Pump the stated amount of grease onto a balance, while counting the pump strokes.

- ◆ For optimum distribution of the lubricant, a lubrication run must be performed after each lubrication procedure. To do this, move the screw nut once over the entire working stroke. For short-stroke applications (motion cycle < 2.5 spindle rotation) see lubrication run lengths for short-stroke applications in the ETH catalogue.

### 3.2.2. Relubrication via central lubrication port (option)

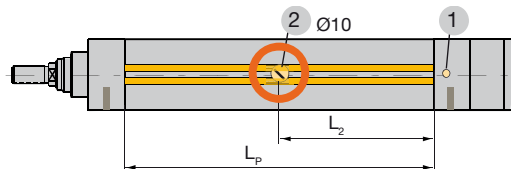


Figure 36: Relubrication via central lubrication port (option)

- 1: Central lubrication (standard)  
2: Central lubrication (Option)

#### Lubrication port position

Depending on the cylinder size and the selected stroke, the relubrication hole is located in the mid of the profile or in the mid of the stroke.

Stroke  $\geq$  Stroke limit:  $L_2 = L_p/2$

Stroke  $<$  Stroke limit:  $L_2 = \text{stroke} / 2 + \text{Offset}$

	Pitch	Stroke limit [mm]	Offset [mm]
ETH032	M05	50	15
	M10		
	M16		
ETH050	M05	60	15
	M10		
	M20		
ETH080	M05	100	20
	M10		
	M32		
ETH100	M10	160	22
	M20		
ETH125	M10	240	25
	M20		

#### Start-up position of relubrication port

Assumption: Position = 0 at the rear buffer (lead screw completely retracted)

		Position of center lubrication option [mm]	
	Pitch	Stroke $\leq$ stroke limit [mm]	Stroke $>$ Stroke limit
ETH032	M05	$\frac{1}{2} \times \text{stroke} + 18$	$\frac{1}{2} \times \text{stroke}$
	M10	$\frac{1}{2} \times \text{stroke} + 22.5$	
	M16	$\frac{1}{2} \times \text{stroke} + 24.5$	
ETH050	M05	$\frac{1}{2} \times \text{stroke} + 18.5$	
	M10	$\frac{1}{2} \times \text{stroke} + 21.5$	
	M20	$\frac{1}{2} \times \text{stroke} + 27.5$	
ETH080	M05	$\frac{1}{2} \times \text{stroke} + 24.5$	
	M10	$\frac{1}{2} \times \text{stroke} + 33.5$	
	M32	$\frac{1}{2} \times \text{stroke} + 48.5$	
ETH100	M10	$\frac{1}{2} \times \text{stroke} + 59$	
	M20	$\frac{1}{2} \times \text{stroke} + 78$	
ETH125	M10	$\frac{1}{2} \times \text{stroke} + 71$	
	M20	$\frac{1}{2} \times \text{stroke} + 115$	

The mentioned distances from the rear stop (on the motor side) to the central lubrication port in the profile are only reference values.

◆ Loosen lubrication port screw.

Repeat the following process three times:

◆ Move the cylinder slowly to its lubricating position until the lubricating port becomes visible.

- ◆ With frame sizes ETH032, ETH050 and ETH080 the lubrication ports have a diameter of 2.5 mm.  
With frame sizes ETH100 and ETH125 the lubrication nipple is integrated.  
For all sizes you need a beaked nozzle for your grease gun (Part No.: 180-006043).
- ◆ Insert the nozzle into the hole in the cylinder profile and place it orthogonally onto the lubricating port.
- ◆ Use 1/3 of the defined amount of lubricant.

**NOTICE**

The amount of lubricant applied can be defined by the number of pump strokes. Pump the stated amount of grease onto a balance, while counting the pump strokes.

- ◆ For optimum distribution of the lubricant, a lubrication run must be performed after each lubrication procedure. To do this, move the screw nut once over the entire working stroke. For short-stroke applications (motion cycle < 2.5 spindle rotation) see lubrication run lengths for short-stroke applications in the ETH catalogue.

### 3.3 Toothed belt

#### 3.3.1. Checking the toothed belt

In general, the high performance toothed belts used in the ETH are maintenance free.

Visual inspection of the timing belt is however required. Please check the toothed belt for the following aspects:

- ◆ Wear at the teeth
- ◆ Cracks in the tooth root surface
- ◆ Fractures in the belt back

If you find signs of wear, the toothed belt must be exchanged (see page 48).

For visual inspection, you must only remove the (upper) lid with the four screws (see Figure 37 & Figure 39 Pos.4+11).

**ATTENTION!** Do not remove the screws of Pos.11 entirely.

**WARNING**

Do not forget to refix the lid after the inspection!

#### 3.3.2. Toothed belt exchange

Under good operating conditions, the toothed belt may run for 6000 hours of operation. After this time, the belt must be exchanged.

Good operating conditions are:

- ◆ no negative environmental influences
- ◆ perfect alignment of the shafts
- ◆ approved and correct geometry of the pulleys
- ◆ correct mounting
- ◆ permitted transmissible drive torques are respected.

### 3.3.3. Exchanging the toothed belt (ETH032 ... 080)

(valid for all mounting options)

(not valid for mounting Parker EX motors)

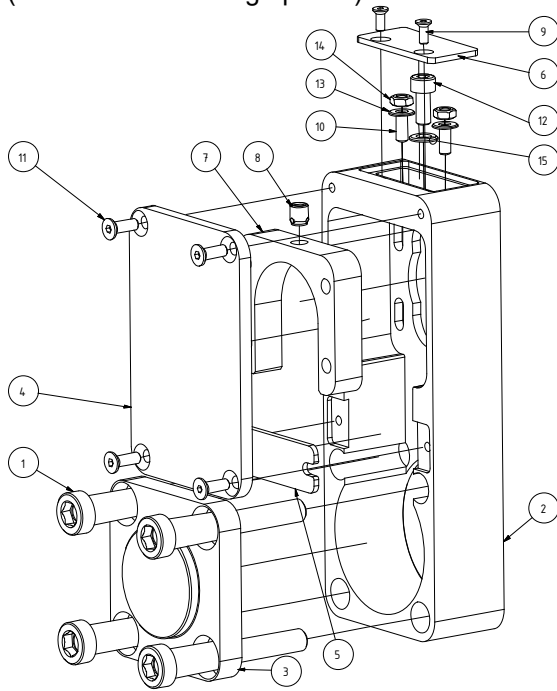


Figure 37: Parallel housing (2)

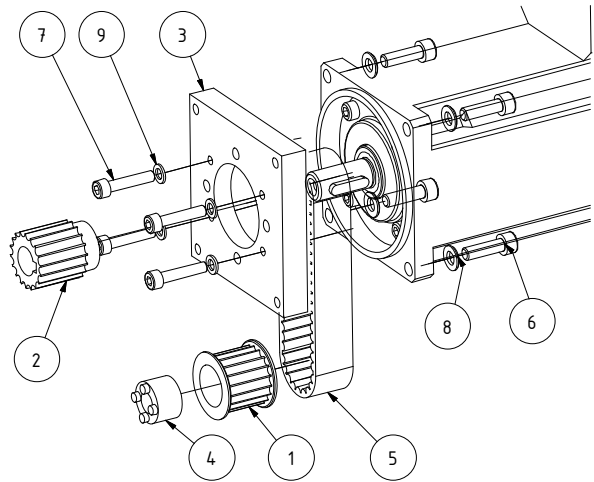


Figure 38: Motor mounting option ETH032..080 (2)

- ◆ Dismantle the motor (see page 35)
- ◆ Loosen and remove 4 screws (please refer to Figure 37 Pos.1).
- ◆ Remove cover (please refer to Figure 37 Pos.3).
- ◆ Remove bar (please refer to Figure 37 Pos.5).
- ◆ Remove used toothed belt
- ◆ Clean the inside of the parallel housing (see Figure 37 pos.2) and the previously removed components.
- ◆ Insert new toothed belt
- ATTENTION!** Please make sure that the toothed belt is correctly geared in the pulley toothing.
- ◆ Insert bar (please refer to Figure 37 Pos.5).
- ◆ Replace cover (please refer to Figure 37 Pos.3).
- ◆ Apply screw lock "Wiko 02K43 medium" to 4 screws (please refer to Figure 37 Pos.1) and tighten slightly.
- ◆ Align gearbox (please refer to Figure 37 Pos.2) with the electro cylinder.
- ◆ Tighten 4 screws (please refer to Figure 37 Pos.1) with the given tightening torque.

ETH032	ETH050	ETH080
9 Nm	20 Nm	40 Nm

- ◆ Mounting the motor (see page 35)
- ◆ Setting the toothed belt pretension:
  - ◆ For the same toothed belt. Re-apply toothed belt tension (see page 41)
  - ◆ For a new toothed belt: Resetting the toothed belt pre-tension (see page 41)
- ◆ Mount lid (please refer to Figure 37 Pos.6) with screws (please refer to Figure 37 Pos.9).
- ◆ Mount lid (please refer to Figure 37 Pos.4) with screws (please refer to Figure 37 Pos.11).

### 3.3.4. Exchanging the toothed belt (ETH100&125)

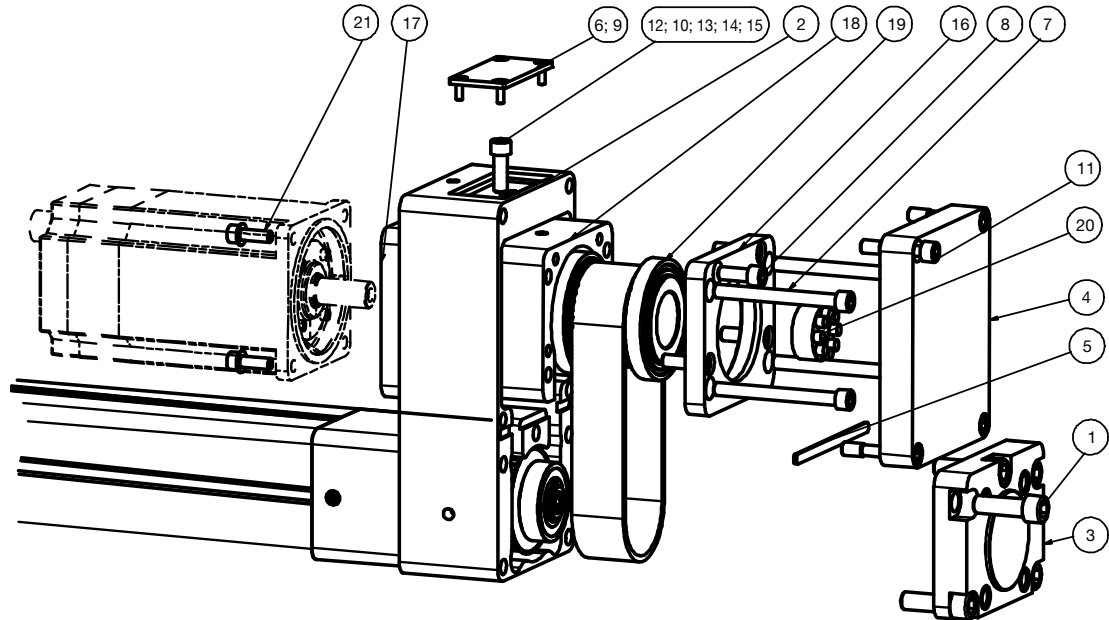


Figure 39: Exchange toothed belt ETH100&125

- ◆ Dismantle the motor (see page 32)



The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

- ◆ Toothed belt detensioning
  - ◆ Unscrew the 4 screws (Figure 39 Pos. 7). Set aside the screws and motor flange (Figure 39 pos. 17).
  - ◆ **ATTENTION!** Secure motor flange against dropping!
  - ◆ Loosen central toothed belt tensioning screw (please refer to Figure 39 Pos.12). The drive unit must lower slightly when the tensioning screw is loosened.



Secure upper bearing unit (Figure 39 Pos. 18) against dropping. Danger of crushing: Do not place your hands or fingers between upper bearing unit and parallel housing.

- ◆ Unscrew and set aside the tensioning screw (Figure 39 pos. 12).
  - ◆ Loosen 5 screws (please refer to Figure 39 Pos.1) and remove lid (please refer to Figure 39 Pos.3). If the lid can not be removed easily (please refer to Figure 39 Pos.3), try to remove it with a slightly pivoting movement.
  - ◆ Remove middle bar (please refer to Figure 39 Pos.5) with seal.
  - ◆ Remove upper bearing unit with toothed belt (please refer to Figure 39 Pos.18).
  - ◆ Unscrew 4 screws (Figure 39 39 pos. 8) from the bearing unit and set aside.
  - ◆ Remove the bearing flange (Figure 39 39 pos. 16) from the bearing unit (see illustration 39 pos. 18) by means of the existing impression threads and two screws M6x30 (not included in the scope of delivery). Screw in the screws to the stop and then screw in both screws alternately by 1/2 turn each.
  - ◆ Remove hollow shaft with the two bearings (please refer to Figure 39 Pos.19) from the bearing unit (please refer to Figure 39 Pos.18).
  - ◆ Take out used toothed belt.
  - ◆ Clean the inside of the parallel housing (see illustration 39 pos.2) and the previously removed components.
- Mounting in reverse order:
- ◆ Insert new toothed belt



Please make sure that the toothed belt is correctly geared in the pulley toothing.

**⚠ CAUTION**

Do only use the toothed belt specified by Parker.  
Do only use the toothed belts with mentioned part number.

- ◆ To insert the hollow shaft (Figure 39 pos. 19) with the two bearings into the bearing unit (Figure 39 pos. 18) and mount the bearing flange (Figure 39 pos. 16) use a hand press and carefully press the parts into each other.
- ◆ Screw screws (Figure 39 Pos.8) into the bearing unit.

**⚠ WARNING**

Provide screws with screw lock and observe screw tightening torque.

**Tightening torques: Toothed belt change ETH100&125**

	Position	Screw tightening torques	Screw locking compound
ETH100	Pos.1	110 Nm	Loctite 242 / Wiko02K43
	Pos.7	70 Nm	Loctite 242 / Wiko02K43
	Pos.8	70 Nm	Loctite 242 / Wiko02K43
ETH125	Pos.1	250 Nm	Loctite 242 / Wiko02K43
	Pos.7	115 Nm	Loctite 242 / Wiko02K43
	Pos.8	115 Nm	Loctite 242 / Wiko02K43

- ◆ Adjust the toothed belt pre-tension with the tension screw (Figure 39 pos.12):
  - ◆ For the same toothed belt. Re-apply toothed belt pre-tension (see page 41).
  - ◆ For a new toothed belt: Resetting the toothed belt pre-tension (see page 41)
- ◆ Mounting the motor (see page 32)

### 3.4 Belt / belt tensions

	ETH032	ETH050	ETH080	ETH100	ETH125
<b>Part No.</b>	0111.913	0121.913	0131.913	0141.913-0 2	0151.913
<b>Belt pre-tension</b>	210 N ±7 N	230 N ±7 N	450 N ± 14 N	3500 N ±19 N	4900 N ±36 N
<b>Trum Frequency</b>	438 Hz ± 14 Hz	306 Hz ± 10 Hz	236 Hz ± 8 Hz	370 Hz ±2 Hz	272 Hz ±2 Hz
<b>Belt mass</b>	0.060 kg/m	0.080 kg/m	0.120 kg/m	0.2065 kg/m	0.33 kg/m
<b>Belt width</b>	15 mm	20 mm	30 mm	50 mm	62 mm
<b>Center distance</b>	67.5 mm	87.5 mm	130 mm	176 mm	224mm

## 4. Supply repair

In the event of a damage or a mechanical defect, the entire unit must be returned for repair (Parker Hannifin (see page 2)). The repair must be made by trained Parker personnel.

### User conversions and changes are not Permitted

The linear actuator must not be changed in its design or in terms of safety without our approval. Any change as defined here made by the user excludes any liability on our part.

# 5. Index

## A

Accessory mounting - bearing block • 27  
 Applications in accordance with the Regulations • 12  
 Applications not in accordance with the intended use • 13  
 ATEX and machinery directive • 10  
 ATEX declaration of conformity • 7  
 ATEX specific safety instructions • 16

## B

Belt / belt tensions • 50

## C

Checking the toothed belt • 47  
 Commissioning • 24  
 Conditions of utilization • 22  
 Cylinder mounting with mounting plates or foot mounting brackets • 25

## D

Device assignment • 5  
 Direction of the motor during extension of the cylinder • 30

## E

Electrical installation • 30  
 ETH ATEX marking • 11  
 Exchanging the toothed belt (ETH032 ... 080 • 48  
 Exchanging the toothed belt (ETH100&125) • 49  
 Explosion subgroup • 10  
 Explosive atmospheres • 8

## F

For Safety Use • 14

## G

General hazards • 14  
 General safety instructions - ATEX • 16

## H

Harmonized European ATEX Standard • 8

## I

Identifying Residual Dangers and Hazardous Areas • 14  
 Introduction • 5  
 Introduction to ATEX • 8  
 IP65 motor mount • 42  
 IP65 motor mount parallel • 43

## L

Lubricating intervals and amount of lubricant for ATEX ETH- Electro Cylinder • 45

## M

Maintenance and service • 44  
 Maintenance schedule • 44  
 Motor / gear assembly with inline motor configuration • 33  
 Motor / gearbox mounting with parallel motor configuration • 35  
 Motor mounting for IP65 inline • 42

Motor/ gear assembly • 32  
 Mounting • 24  
 Mounting explanation • 6  
 Mounting of force sensors • 29  
 Mounting of proximity switches • 30  
 Mounting of the payload • 28  
 Mounting the rod guide (option R) • 27  
 Mounting with mounting accessories • 25  
 Mounting with mounting threads on the cylinder • 25

## O

Operator's obligations • 13

## P

Packaging, storage, transport • 17  
 Parallel mount ETH100  
 Parallel mounting ETH032 ... ETH080 standard • 35  
 Parallel mounting ETH032 ... ETH080 with Ex - Motor • 37  
 Planning of the ETH Electro Cylinder for EX-Environment • 23  
 Product specific safety instructions • 16

## R

Re-apply toothed belt pre-tension • 41  
 Relubrication via central lubrication port (option) • 46  
 Relubrication via central lubrication port (standard) • 45  
 Resetting the toothed belt pre-tension • 41

## S

Safety Instructions for Operating Personnel • 15  
 Safety Instructions for the Company Using the System • 15  
 Screw tightening torques for the mounting of the customer's ETH cylinder • 25  
 Sensors • 30  
 Setting the end limits • 31  
 Side Load • 28  
 Special notes on transport • 18  
 Supply repair • 50

## T

Temperature classes • 10  
 Terms of guarantee / warranty • 21  
 Toothed belt • 47  
 Toothed belt exchange • 47  
 Type identification plate • 5  
 Type of explosion protection • 9

## W

Working safely • 14

## Z

Zone classification / device categories • 9

# Parker Worldwide

## Europe, Middle East, Africa

**AE – United Arab Emirates,**  
Dubai  
Tel: +971 4 8127100  
parker.me@parker.com

**AT – Austria,** St. Florian  
Tel: +43 (0)7224 66201  
parker.austria@parker.com

**AZ – Azerbaijan,** Baku  
Tel: +994 50 2233 458  
parker.azerbaijan@parker.com

**BE/NL/LU – Benelux,**  
Hendrik Ido Ambacht  
Tel: +31 (0)541 585 000  
parker.nl@parker.com

**BG – Bulgaria,** Sofia  
Tel: +359 2 980 1344  
parker.bulgaria@parker.com

**BY – Belarus,** Minsk  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**CH – Switzerland,** Etoy  
Tel: +41 (0)21 821 87 00  
parker.switzerland@parker.com

**CZ – Czech Republic,** Klecany  
Tel: +420 284 083 111  
parker.czechrepublic@parker.com

**DE – Germany,** Kaarst  
Tel: +49 (0)2131 4016 0  
parker.germany@parker.com

**DK – Denmark,** Ballerup  
Tel: +45 43 56 04 00  
parker.denmark@parker.com

**ES – Spain,** Madrid  
Tel: +34 902 330 001  
parker.spain@parker.com

**FI – Finland,** Vantaa  
Tel: +358 (0)20 753 2500  
parker.finland@parker.com

**FR – France,** Contamine s/Arve  
Tel: +33 (0)4 50 25 80 25  
parker.france@parker.com

**GR – Greece,** Piraeus  
Tel: +30 210 933 6450  
parker.greece@parker.com

**HU – Hungary,** Budaörs  
Tel: +36 23 885 470  
parker.hungary@parker.com

**IE – Ireland,** Dublin  
Tel: +353 (0)1 466 6370  
parker.ireland@parker.com

**IL – Israel**  
Tel: +39 02 45 19 21  
parker.israel@parker.com

**IT – Italy,** Corsico (MI)  
Tel: +39 02 45 19 21  
parker.italy@parker.com

**KZ – Kazakhstan,** Almaty  
Tel: +7 7273 561 000  
parker.easteurope@parker.com

**NO – Norway,** Asker  
Tel: +47 66 75 34 00  
parker.norway@parker.com

**PL – Poland,** Warsaw  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**PT – Portugal**  
Tel: +351 22 999 7360  
parker.portugal@parker.com

**RO – Romania,** Bucharest  
Tel: +40 21 252 1382  
parker.romania@parker.com

**RU – Russia,** Moscow  
Tel: +7 495 645-2156  
parker.russia@parker.com

**SE – Sweden,** Borås  
Tel: +46 (0)8 59 79 50 00  
parker.sweden@parker.com

**SK – Slovakia,** Banská Bystrica  
Tel: +421 484 162 252  
parker.slovakia@parker.com

**SL – Slovenia,** Novo Mesto  
Tel: +386 7 337 6650  
parker.slovenia@parker.com

**TR – Turkey,** Istanbul  
Tel: +90 216 4997081  
parker.turkey@parker.com

**UA – Ukraine,** Kiev  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**UK – United Kingdom,** Warwick  
Tel: +44 (0)1926 317 878  
parker.uk@parker.com

**ZA – South Africa,** Kempton Park  
Tel: +27 (0)11 961 0700  
parker.southafrica@parker.com

## North America

**CA – Canada,** Milton, Ontario  
Tel: +1 905 693 3000

**US – USA,** Cleveland  
Tel: +1 216 896 3000

## Asia Pacific

**AU – Australia,** Castle Hill  
Tel: +61 (0)2-9634 7777

**CN – China,** Shanghai  
Tel: +86 21 2899 5000

**HK – Hong Kong**  
Tel: +852 2428 8008

**IN – India,** Mumbai  
Tel: +91 22 6513 7081-85

**JP – Japan,** Tokyo  
Tel: +81 (0)3 6408 3901

**KR – South Korea,** Seoul  
Tel: +82 2 559 0400

**MY – Malaysia,** Shah Alam  
Tel: +60 3 7849 0800

**NZ – New Zealand,** Mt Wellington  
Tel: +64 9 574 1744

**SG – Singapore**  
Tel: +65 6887 6300

**TH – Thailand,** Bangkok  
Tel: +662 186 7000

**TW – Taiwan,** Taipei  
Tel: +886 2 2298 8987

## South America

**AR – Argentina,** Buenos Aires  
Tel: +54 3327 44 4129

**BR – Brazil,** Sao Jose dos Campos  
Tel: +55 800 727 5374

**CL – Chile,** Santiago  
Tel: +56 2 623 1216

**MX – Mexico,** Toluca  
Tel: +52 72 2275 4200

© 2019 Parker Hannifin Corporation. All rights reserved.

### EMEA Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

### US Product Information Centre

Toll-free number: 1-800-27 27 537

www.parker.com



Your local authorized Parker distributor